


CLASSIC 60s JAZZMASTER® (014-1210-XXX / 014-4800-XXX)

PARTS LAYOUT

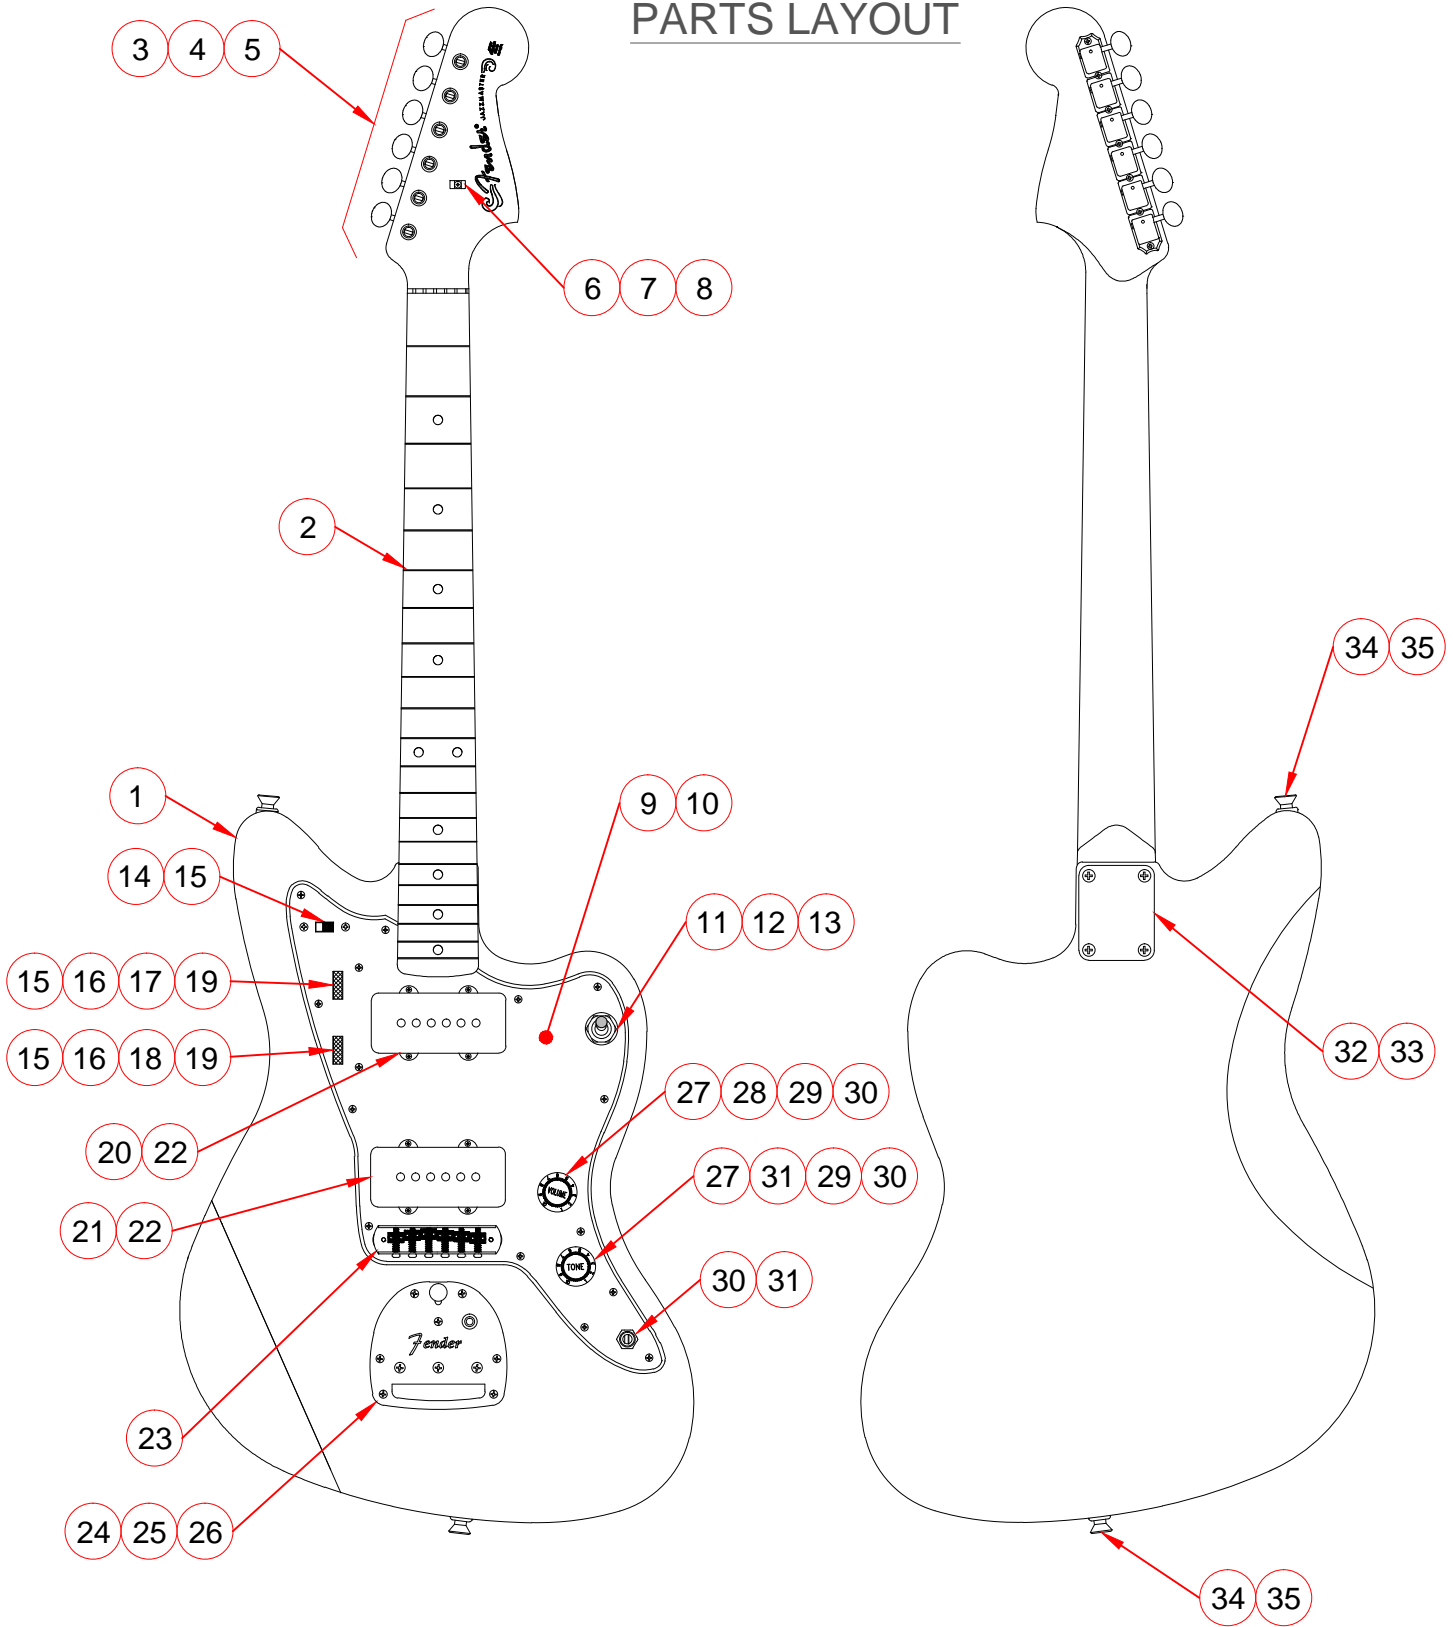

CLASSIC 60s JAZZMASTER ® (014-1210-XXX / 014-4800-XXX)


PARTS LIST

REF #	DESCRIPTION	PART NUMBER
1	BODY 60S CLSC JAZZMASTER LQ SFG B&P	7705228557
	BODY 60S CLSC JAZZMASTER 3TSB RELIC	7706218516
2	NECK 60S CLSC JAZZMASTER RW PNT	7705227000
	NECK 60S CLSC JAZZMASTER RW RELIC	7706217000
3	KEY, VINT ST	0047912000
4	BUSHING KEY VINT	0053020000
5	SCRW SMAB 3x3/8 RHP NI	0011357049
6	STRING GUIDE NICKEL	0994910000
7	SCRW SMA 3x5/8 RHP NI	0011358049
8	SPACER STR TREE 62 STRAT	0020423000
9	PICKGUARD JAZZMASTER SS W/B/W	7703307000
	PICKGUARD JAZZMASTER SS W/B/W RELIC	7703307400
10	SCRW SMAB 4x1/2 OHP NI	0015578049
11	SWITCH 3 POS TOGGLE AGED KNOB	0053694049
12	WASHER LOCK INTL 3/8 X .687	0016436049
13	WSHR FLAT 3/8x.614 NI	0031153049
14	SWITCH SLIDE SS 50 DP DT	0017079049
15	SCRW M 4-40x1/4 OHP NI	0015719049
16	KNOB DISC PRESET CNTRL 1"x.25	0054455000
17	CONTROL MINIPOT 1MEG LINEAR W/NUT	0054457000
18	CONTROL MINIPOT 50K LINEAR W/NUT	0054458000
19	WASHER LOCK INTERNAL TOOTH 1/4	0016451000
20	PICKUP ASSY 65 JAZZMASTER NK V.WHT	0094013000
21	PICKUP ASSY 65 JAZZMASTER BRG V.WHT	0094012000



CLASSIC 60s JAZZMASTER® (014-1210-XXX / 014-4800-XXX)

WIRING DIAGRAM

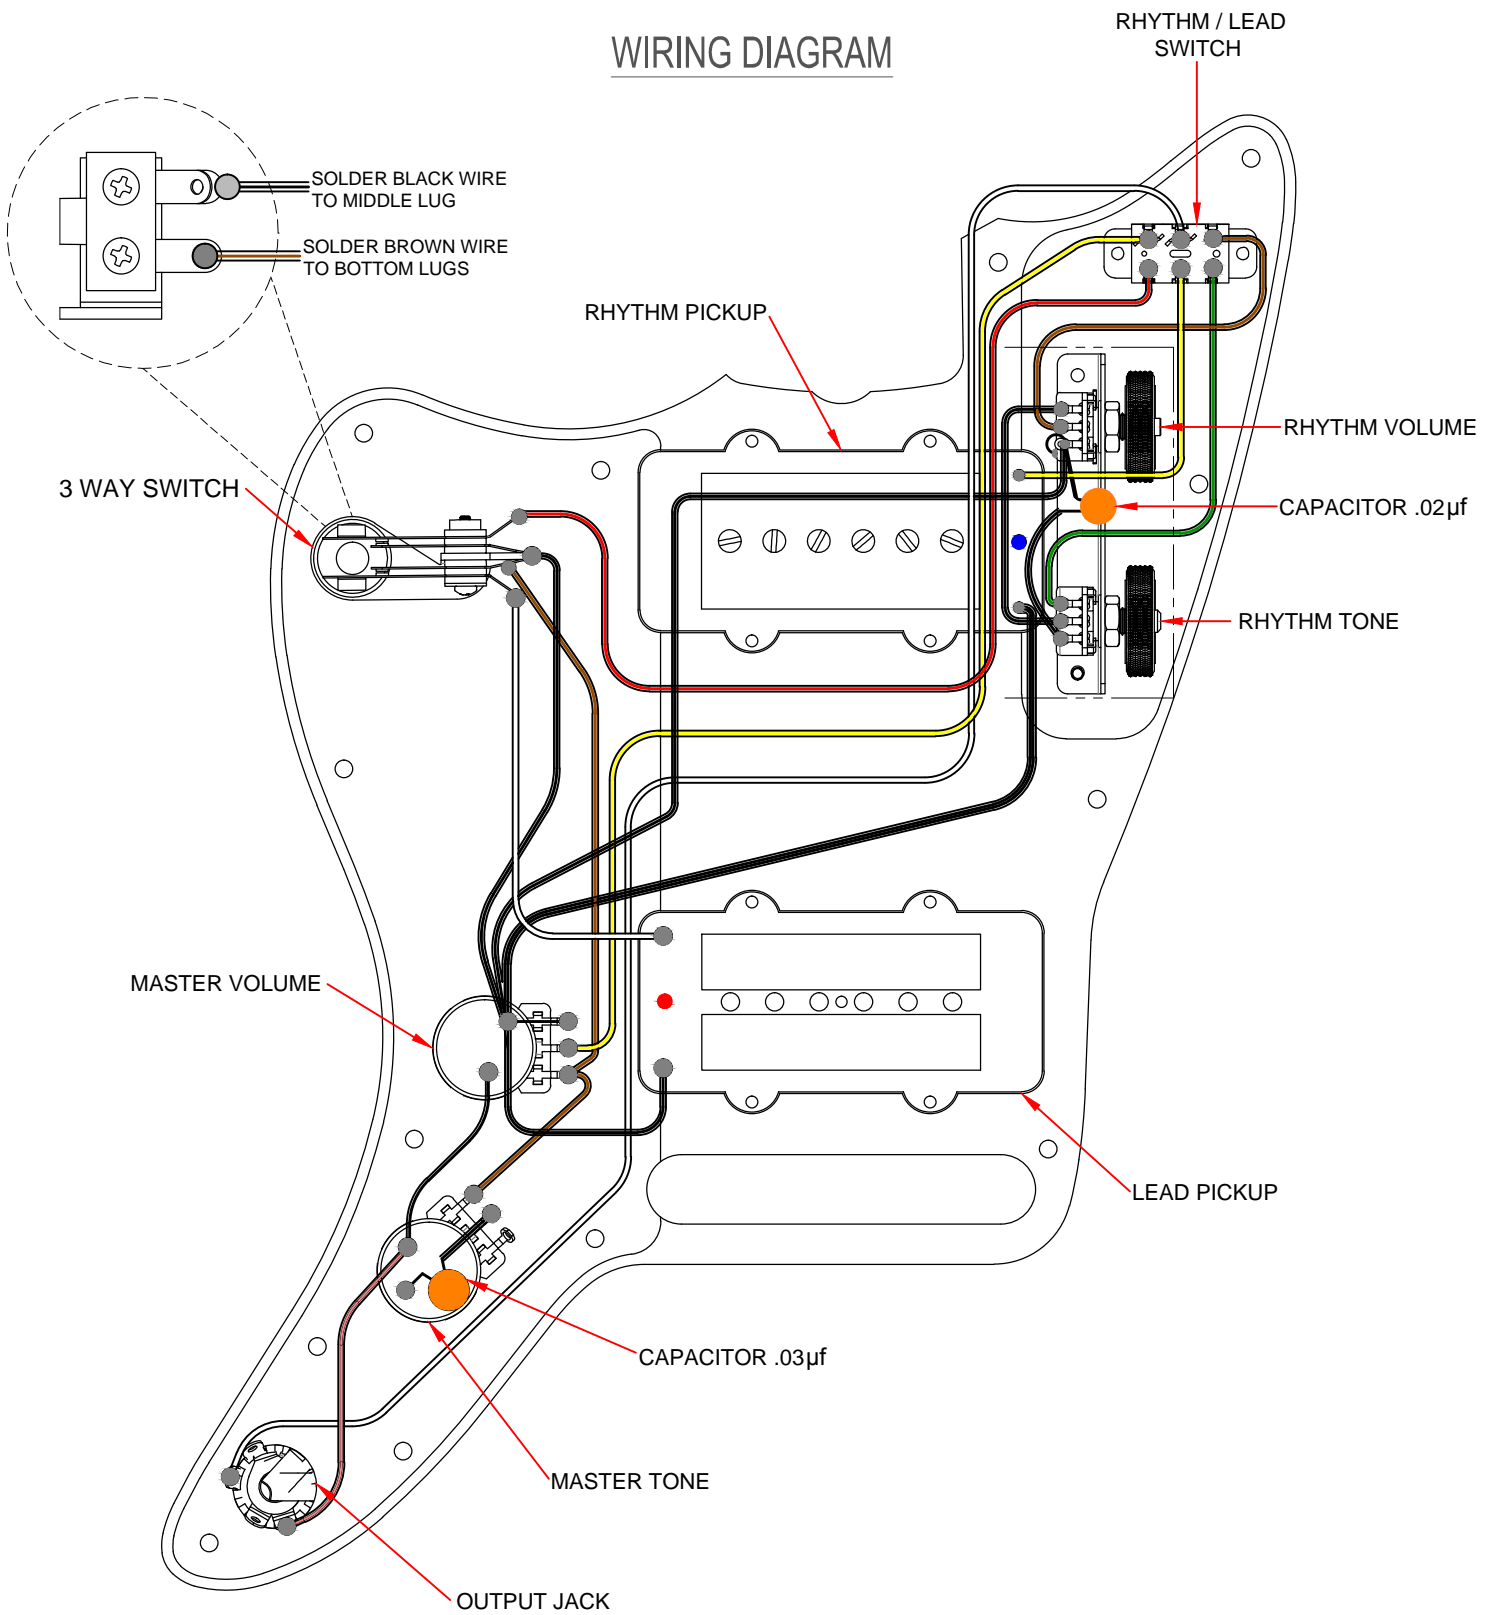



CLASSIC 60s JAZZMASTER® (014-1210-XXX / 014-4800-XXX)

SWITCH & CONTROL FUNCTION

NOTE : ONLY RHYTHM PICKUP IS FUNCTIONAL WHEN RHYTHM/LEAD TOGGLE SWITCH IS IN RHYTHM POSITION (LEAD PICKUP IS OFF)

 










 
RHYTHM / LEAD SWITCH


RHYTHM  LEAD 

RHYTHM VOLUME

RHYTHM TONE

THESE FUNCTIONS ARE FOR RHYTHM PICKUP ONLY, AND ONLY WHEN SWITCH IS IN RHYTHM POSITION

3 WAY SWITCH POSITION		
NOTE : OPERATIONAL ONLY WHEN RHYTHM / LEAD SWITCH IS IN LEAD POSITION		
		
		
		
	PICKUP IS ON	 INDICATE POSITION OF 3 WAY SWITCH
	PICKUP IS OFF	

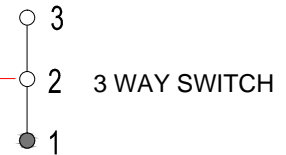

MASTER VOLUME
WHEN RHYTHM/LEAD TOGGLE SWITCH IS IN LEAD POSITION
(NON-FUNCTIONAL IN RHYTHM POSITION)

MASTER TONE
WHEN RHYTHM/LEAD TOGGLE SWITCH IS IN LEAD POSITION
(NON-FUNCTIONAL IN RHYTHM POSITION)

