

 
 

 
 










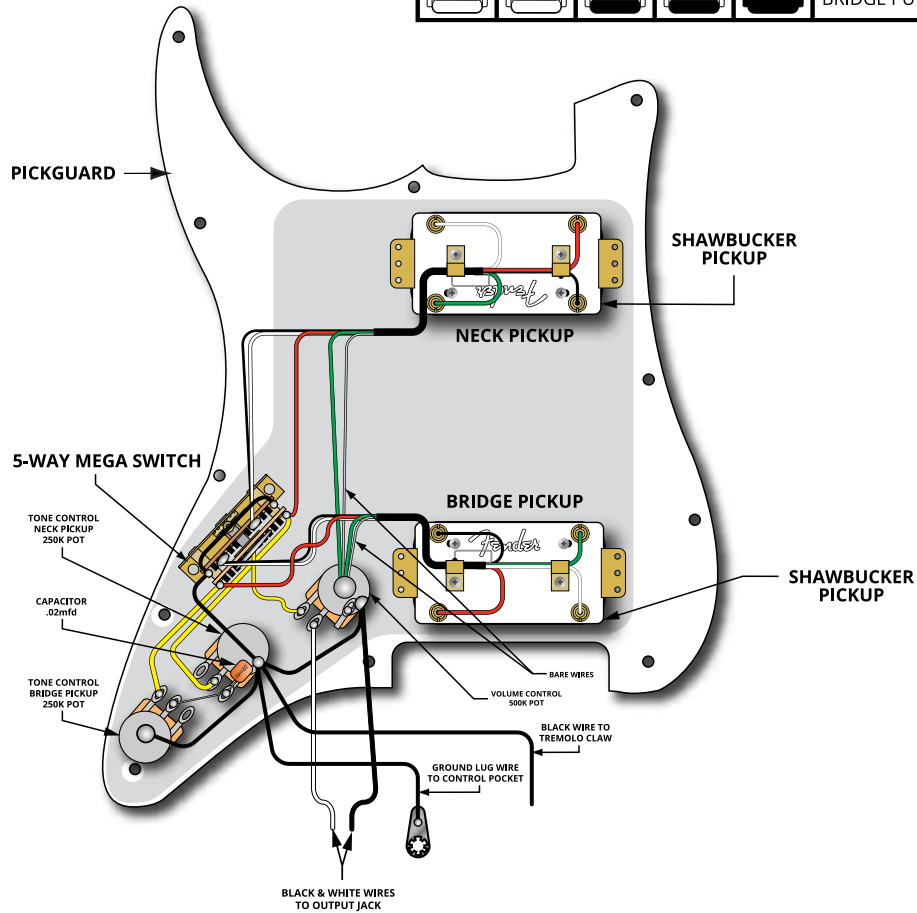
 

 



 


 


 











WIRING DIAGRAM FOR HH CONFIGURATION

POSITION 5 NECK HUMBUCKING	POSITION 4 NECK SINGLE COIL	POSITION 3 BOTH SINGLE COIL	POSITION 2 BRIDGE SINGLE COIL	POSITION 1 BRIDGE HUMBUCKING	 = OFF  = ON
					5 WAY SELECTOR POSITION
					NECK PU
					BRIDGE PU



WIRING DIAGRAM FOR HSS CONFIGURATION

POSITION 5 NECK SINGLE COIL	POSITION 4 MID & NECK SINGLE COIL	POSITION 3 MID SINGLE COIL	POSITION 2 BRIDGE & MID SINGLE COIL	POSITION 1 BRIDGE HUMBUCKING	 = OFF  = ON
					5 WAY SELECTOR POSITION
					NECK PU
					MID PU
					BRIDGE PU

