Fender

American Acoustasonic® Series Jazzmaster®

Quick Start Guide

Josiasonic Scries Jazziniasici



American Acoustasonic Jazzmaster


There's no denying the cult-like allure of a Jazzmaster – from its sleek offset body to the unmistakable call of its rebel yell.

Four new voicings set the Acoustasonic Jazzmaster apart from its Strat® and Tele® predecessors – working in tandem with the unique resonance of a larger offset body to offer our warmest, most natural acoustic tones yet.

Add in some blazing new electric voices courtesy of a Tim Shaw-designed humbucking pickup and you've got an instrument that defies definition.

Neither acoustic or electric, the Acoustasonic Jazzmaster is the most versatile guitar Fender has ever made – an all-in-one tool that invites adventure and inspiration from studio to stage.

Learn more at: FENDER.COM/ACOUSTASONIC

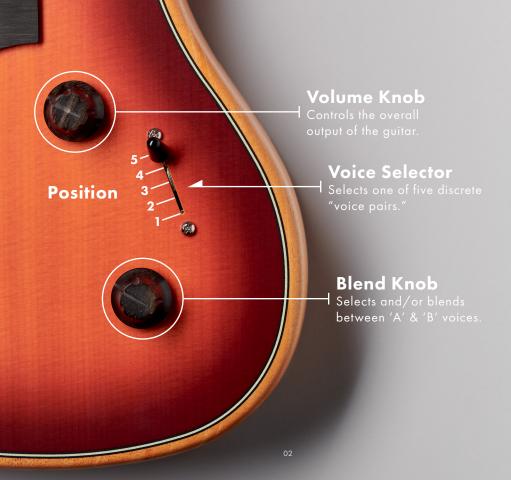

Acoustasonic Controls

The Acoustasonic Jazzmaster is the pinnacle of Fender craftsmanship, innovation and purposeful design. From the specially-tuned soundport and resonant offset body shape, to the powerul Fender and Fishman®-designed engine, every aspect of this guitar is engineered for versatility, playability and adventure.







Charged And Ready

Fully charge the battery before playing the instrument for the first time. Connect the USB charging cable to a 5-volt USB-compliant charger and plug into a wall socket. The LED on the output jack will glow solid red while charging and change to solid green when charge is complete.

Allow 4 - 5 hours for the battery to reach full charge.*

^{*}Note: Non-USB-compliant chargers may take longer than 4 - 5 hours.







Rosewood Dreadnought

Warm and articulate across the frequency spectrum, with complex overtones.




Mahogany Slope Shoulder

A dry, earthy and organic tone – great for Americana-style flatpicking.

Warmer



Brighter

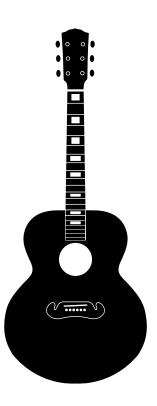



Mahogany Jumbo

Loud and airy – perfect for heavy responsive strumming to accompany vocals and other instruments.

Larger / Full Body Sound



All-Mahogany Small Body

Articulate, warm and focused tone that lends itself to fingerpicking and arpeggiated chords.

Mid-Forward / Tighter Low End







Rosewood Auditorium

Tighter and brighter for a more Blendern hi-fi sound and detailed midrange that sits beautifully in a mix. 3 B

Body Sensor Pickup

Creates a percussive top – perfect for a solo looping performance – and enhanced harmonics that pop!

Adds in Body Sensor

Removes Body Sensor







Lo-Fi Piezo

A cool lo-fi sound produced only by the piezo pickup and the Jazzmaster's unique body resonance. **2** B

Lo-Fi Piezo Crunch

A thin-body acoustic pushed through an electric amp for one-of-a-kind overdriven sounds.

Adds in Electric Tone

Removes Electric Tone







Fender Electric Fat/ Semi-Clean

Cleaner

Produces high-powered electric tones via the Tim Shaw-Designed humbucking pickup. (You won't believe your acoustic guitar can do this.)



Fender Overdriven Electric

Turns up the power to produce a booming overdriven tone that's sure to melt the paint off the walls.







Recommended Charger Specification

USB Connector Type: Micro

Input Power: 100 - 240V, ~50/60Hz, 0.3A

Output Power: 5V DC, 1000mA

Note: Using chargers with output current less than 1A is not recommended.

The battery charge LED indicates the following battery conditions:

Normal Operation

No Light: Normal, may also indicate zero charge.

Blinking Red: Low battery, approximately 1 hour left. Connect your charger.

USB Charger Connected

Steady Red: Charging Steady Green: Fully charged

Cautions

- When adjusting the truss rod, be careful not to over-tighten the rod, or you may risk damaging the neck.
- To avoid risking damage to the top, DO NOT make adjustments inside the body cavity, including altering pickup height.
- Any service work should be performed by a Fender Authorized Service Center.



Tender

Crafted in Corona, California