


Dante™ Firmware for CDL-Series Loudspeakers


Update Guide

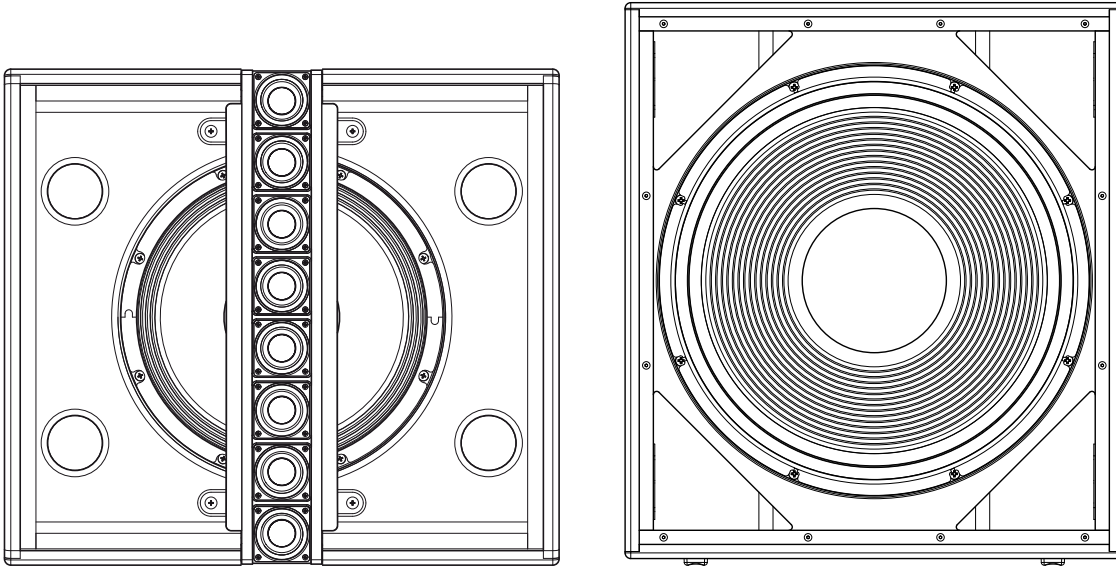


 **Dante®**

Periodically, the Dante module onboard your CDL-series loudspeaker will require a firmware update. To begin, you must connect a computer to the same Dante network as your CDL-series loudspeakers.

1. Log into your My PreSonus account and download the **A2-0.9.0.dnt** firmware. *Note: Your CDL-series loudspeakers must be registered in your My PreSonus account to download the firmware.*
2. Go to www.Audinate.com.
3. Log in or create an Audinate user account.
4. Download the Dante Firmware Update Manager application.
5. Install and run the Dante Firmware Update Manager on the computer networked to your CDL-series loudspeakers.

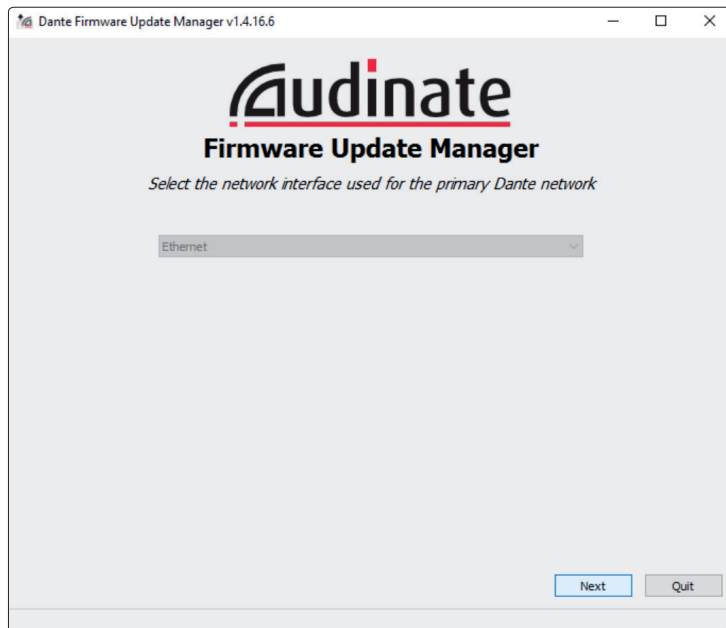


6. Click Next.
7. Select Update Dante Firmware.

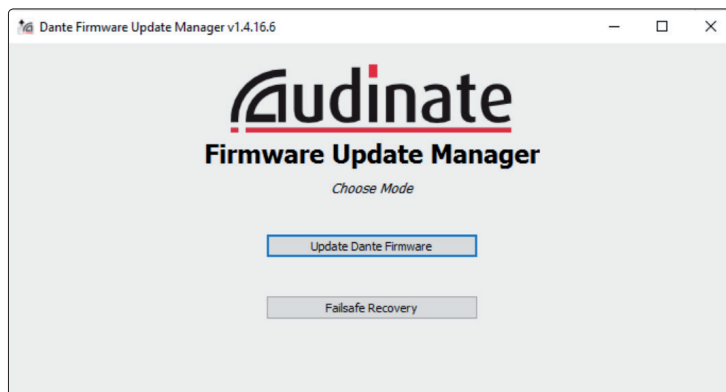


Dante™ Firmware Update Guide for CDL-series Loudspeakers


- From the pop-up window, browse your computer for the Dante firmware (.dnt) file you downloaded from your My PreSonus account.

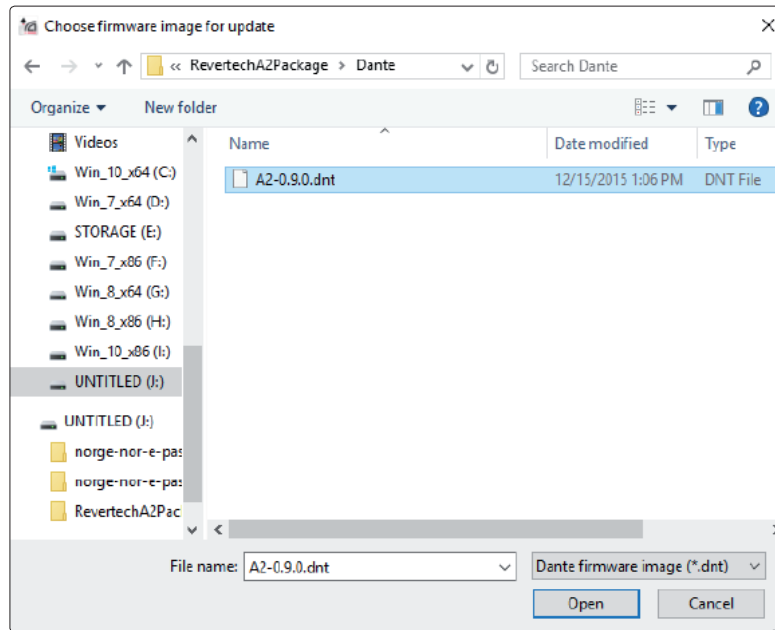


- Check the box next to "Override Device Matching." Click Next.

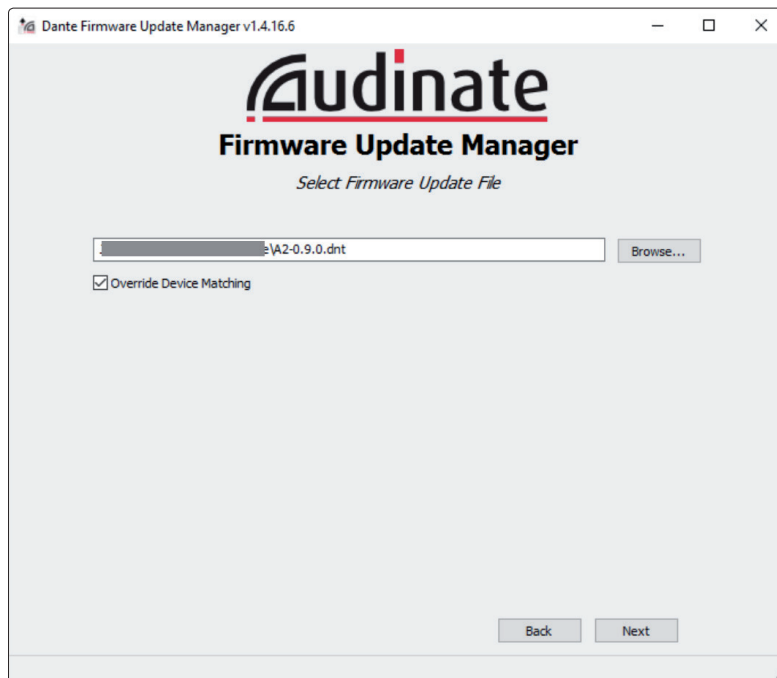


- Click "Yes" when prompted.

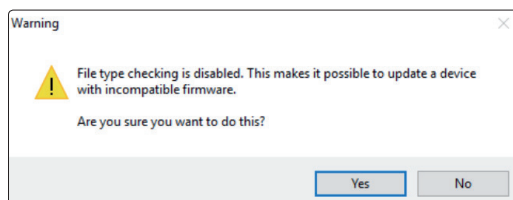


11. Check the box next to each CDL-series loudspeaker in the device list and click Start.

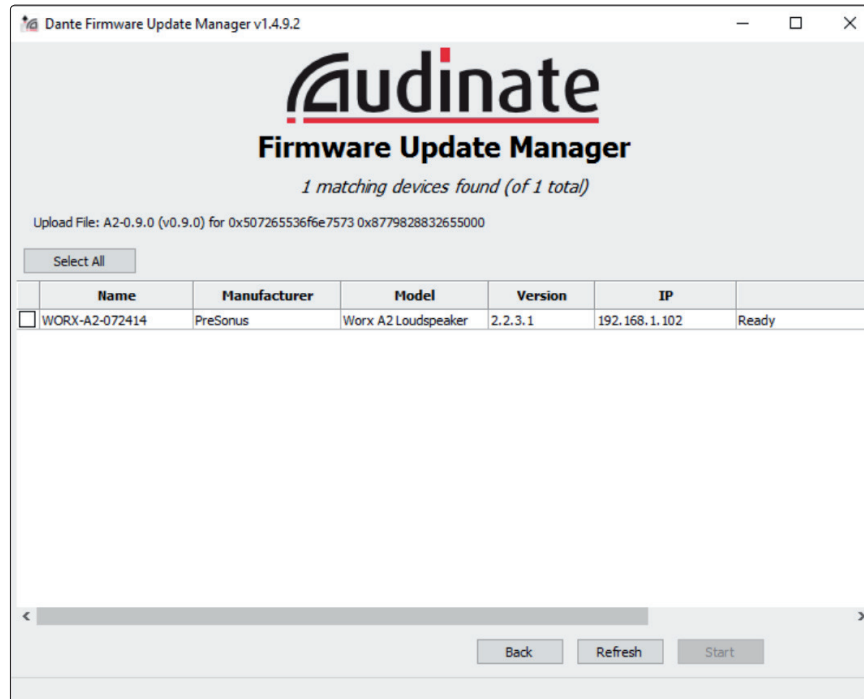

12. Click "OK" when prompted. This will begin the firmware upgrade immediately.


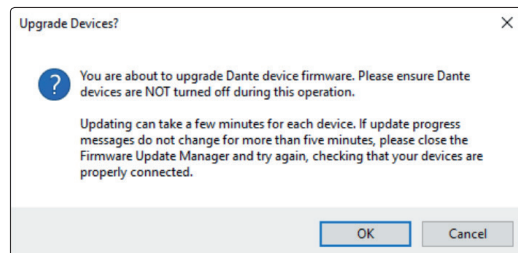


13. You will be alerted when the Upgrade is complete. Click "OK" to exit.

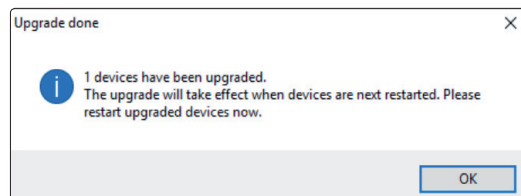

Dante™ Firmware for CDL-Series Loudspeakers

Update Guide

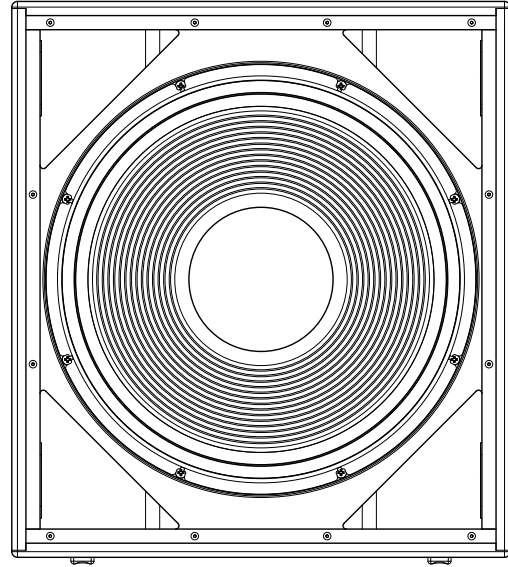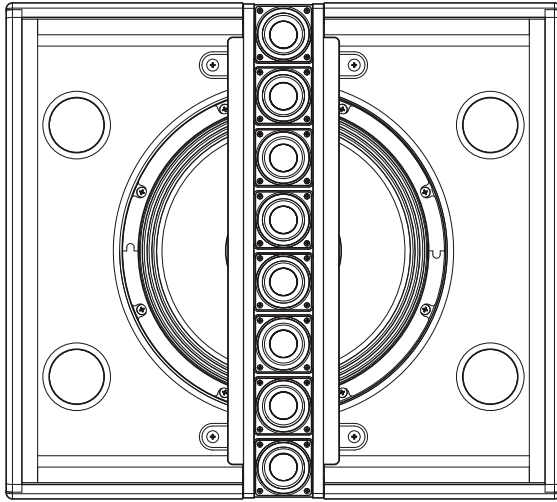

 **Dante®**