


www.fishman.com

FISHMAN[®]

**USER GUIDE
ISYS III ONBOARD PREAMP**

Isys III Quick Start

- 1. Set the controls** • Set **volume** off and **bass**, **middle** and **treble** to center.
- 2. Plug in** • Connect the Isys III to an amplifier or PA with a ¼-inch instrument cable. The **batt** light will flash once quickly to indicate it has switched on.
- 3. Tune up** • Press the **tuner** button. When it's on, the tuner mutes the signal. Press again to exit.
- 4. Turn up** • Raise the **volume** and adjust the **bass** and **treble** controls to your liking.

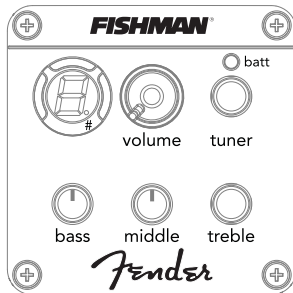

Isys III Controls

Volume • For the cleanest signal, set the **volume** knob as high as possible, without causing distortion or feedback.

Bass • Boost here to add depth and weight to the sound of the guitar.

Middle • Turn the **middle** knob all the way left for a smooth “scooped out” tone at high volume levels. Raise the **middle** knob to the right of center to add midrange “bite” to the sound.

Treble • Boost to cut through the mix. Cut to mellow and subdue the sound.

Tune • Use the tuner lights as shown below to tune your instrument.



"A" note
below pitch



"A" note
in tune



"A" note
above pitch



"A#" note
in tune

When the **batt** lamp lights steadily it is time to change the battery. To conserve the battery, unplug the instrument and turn off the tuner when not in use.

FISHMAN

www.fishman.com