
 
 


HOW TO OPERATE PITCH GENERATION

1. Push power switch  3 times to select pitch function.



2. A-440Hz will show as default value.



Fender[®]

MT-1000

**METRONOME
AUTO/CHROMATIC TUNER**

OWNER'S MANUAL

TEMPO OF TABLE


	TEMPO
LARGO	40, 42, 44, 46, 48, 50, 52, 54, 56, 58, 60
LARGHETTO	60, 63, 66
ADAGIO	69, 72, 76
ANDANTE	80, 84, 88, 92, 96, 100, 104, 108
MODERATO	112, 116, 120
ALLEGRO	126, 132, 138, 144, 152, 160
PRESTO	168, 176, 184, 192, 220
PRESTISSIMO	208

SPECIFICATION


MODEL : Metronome Auto Tuner MT-1000
MEASUREMENT : C1 (32.70Hz) - B8 (7902.14Hz)
SIZE : 75(W) x 105(D) x 33(H)mm
POWER : 9V DC (006P) x 1
WEIGHT : 100g

Fender Musical Instruments Corp.
 7975 North Hayden Road, Scottsdale, Arizona 85258, USA

FEATURES

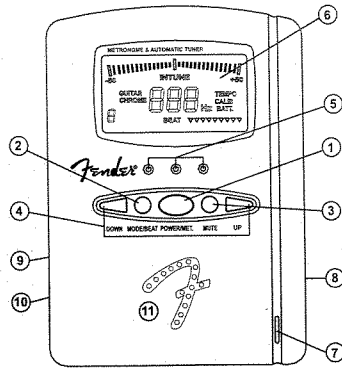


⑥ LCD DISPLAY

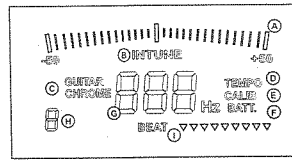

- ① BAR METER : Indicates Tuning status for Tuner.
: Indicates tempo by moving left/right.
- ② IN TUNE : Indicates "In Tune".
- ③ GUITAR/CHROME : Indicates the mode either 'Guitar' or 'chromatic'.
- ④ TEMPO : Indicates tempo shown at ④.
- ⑤ CALIB : Indicates Calibration mode shown at ⑤.
- ⑥ BATT. : Indicates the status of low battery.
- ⑦ SEGMENT : Indicates the calibration for tuner.
- ⑧ SEGMENT : Indicates the tempo for metronome.
- ⑨ BEAT : Indicates beat for metronome.

 - ① **POWER/MET** : Turns unit on/off.
Push for 2/seconds for power on/off.
Select the function by pressing 1, 2 or 3 times.




- ② **MODE/BEAT** : Use to select the mode 'chromatic' or 'guitar' for tuner.
: Use to select beat (2-9 beat) for metronome.
- ③ **MUTE** : Turns the back light off for Tuner.
- ④ **UP/DOWN** : Turns the sound/light off for metronome.
: Selects calibration mode for Tuner. (430Hz~450Hz)
Default value is A=440Hz
: Selects Tempo for metronome.
- ⑤ **LED** : Tuner → Left LED(Red) indicates 'b'.
Center LED(Green) indicates "In Tune".
Right LED(Red) indicates "#".
: Metronome → Left/Right LED indicates Tempo.
Center(Green) indicates Beat.


- ⑦ **MIC** : Allows tuning of acoustic instruments without connecting a cable to the tuner.
- ⑧ **INPUT** : Connection for cable from instrument.
- ⑨ **PHONE** : Allows connection to Earphone/Headphone.
- ⑩ **DC 9V ADAPTER** : Allows connection of optional 9volt adapter.
- ⑪ **SPEAKER** : Generates A pitch sound.
Generates for Metronome.

HOW TO OPERATE TUNER FUNCTION

1. Push the button ①

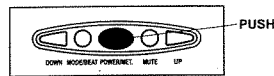


2. Select "guitar" or "chromatic" by pushing button ②
Selected mode will appear on LCD ③

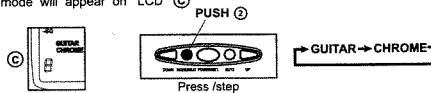


3. Select calibration using UP/DOWN Button ④
Selected calibration will appear on LCD ⑤
Default value is A-440Hz

4. Tune instruments using MIC or plugging into Input ⑦
⑧ **MIC** : Acoustic Guitar and other wind instruments etc.
⑨ **Input Jack** : Electric Guitar or Bass

5. Check the note using ① & ② of LCD display ⑥.
(The green light of LED ⑤ will be on.)

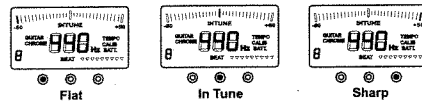


 6. In order to turn LCD off, press the mute ③.




HOW TO OPERATE METRONOME FUNCTION

1. Push the button ① 2 times.

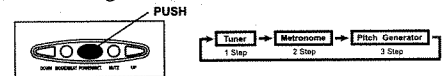


2. Push up/down button ④ to Select the desired Tempo.

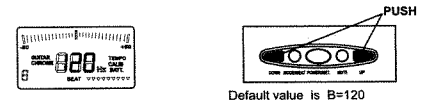


3. Push Mode/Beat button ② to select beat.



4. The Beat sound is on when ⑦ & ⑧ are selected.

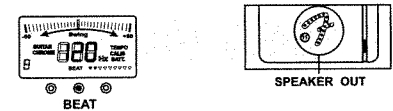

5. Push the Mute ③ to turn the Sound/Light off.

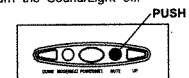

6. The speaker will be off with connection to the Earphone/Headphone.