

PT-100


PEDAL TUNER



Owner's Manual

Fender[®]
www.fender.com

Features

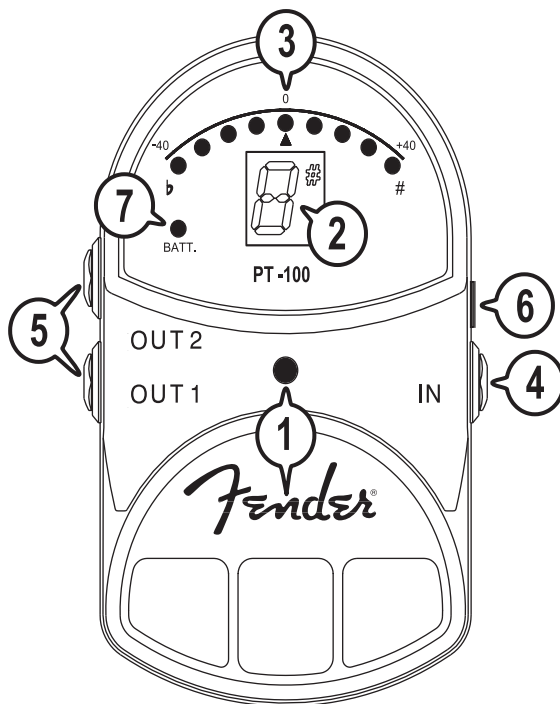

- 1. POWER** - Switches the PT-100 on-off as indicated by the LED above.
- 2. NOTE DISPLAY** - Indicates the note closest to the note played.
- 3. TUNING LEDs** - These nine LEDs indicate the degree of flatness or sharpness of the played note compared to the displayed note. The center "0" LED lights when the played note is "in tune."
- 4. INPUT** - Plug your guitar in here.
- 5. OUT 1 and OUT 2** - Connect either of these output jacks to your amplifier input: OUT 1 is always active. OUT 2 is disabled when the PT-100 is switched on, useful for silent guitar tuning.
- 6. DC 9V INPUT** - Connection for the optional AC power adapter. Connect the adapter to a grounded AC outlet in accordance with the frequency and voltage ratings specified on the adapter.
- 7. BATTERY LED** - Replace the 9V battery when this LED flashes. Open the battery compartment on the back of the unit by rotating the large slotted screw counterclockwise.

Important Safety Instructions



This symbol warns the user of dangerous voltage levels localized within the enclosure.



This symbol advises the user to read all accompanying literature for safe operation of the unit.

- △ Read, retain, and follow all instructions. Heed all warnings.
- △ **CAUTION:** No user serviceable parts inside, refer servicing to qualified personnel only.
- △ **WARNING:** To prevent damage, fire or shock hazard, do not expose this unit to rain or moisture.
- △ Do not drip nor splash liquids, nor place liquid filled containers on the unit.
- △ **WARNING:** The unit must only be connected to a safety agency certified power source (adapter), approved for use and compliant with applicable local and national regulatory safety requirements.
- △ Hazardous voltages may be present within the cabinet even when the power switch is off and the power cord is connected. Therefore, disconnect the power cord from the rear panel power inlet before servicing. The power inlet must remain readily operable.
- △ This product should be located away from heat sources such as radiators, heat registers, or other products that produce heat.

- △ This product should be serviced by qualified service personnel when: the power supply cord or the plug has been damaged; or objects have fallen, or liquid has been spilled onto the product; or the product has been exposed to rain; or the product does not appear to operate normally or exhibits a marked change in performance; or the product has been dropped, or the enclosure damaged.
- △ This product may be equipped with a polarized plug (one blade wider than the other). This is a safety feature. If you are unable to insert the plug into the outlet, contact an electrician to replace your obsolete outlet. Do not defeat the safety purpose of this plug.
- △ Only connect the power supply cord to an earth grounded AC receptacle in accordance with the voltage and frequency ratings specified on the unit or the adapter.
- △ Protect the power supply cord from being pinched or abraded.
- △ The power supply cord of this product should be unplugged from the outlet when left unused for a long period of time, or during electrical storms.
- △ Unplug the power supply cord before cleaning the unit exterior (use a damp cloth only). Wait until the unit is completely dry before reconnecting it to power.

Specifications

| | | | |
|---------------------|-----------------------------|-------------|--------------|
| TYPE: | PR 388 | | |
| PART NUMBER: | 023-9994-000 | | |
| BATTERY: | 9V | | |
| SCALE: | 12 note equal temperament | | |
| RANGE: | G0 (24.49Hz)–B8 (7902.12Hz) | | |
| PRECISION: | ±1 cent | | |
| DIMENSIONS: | Height: 42mm | Width: 78mm | Depth: 129mm |
| WEIGHT: | 485g | | |



Product specifications are subject to change without notice.

A PRODUCT OF:
FENDER MUSICAL INSTRUMENTS CORPORATION, CORONA, CA USA
Fender® is a registered trademark of FMIC. © 2004 FMIC. All rights reserved. v.040818