 




**DIGITAL AUTO TUNER
TX-1000
INSTRUCTIONS FOR USE**

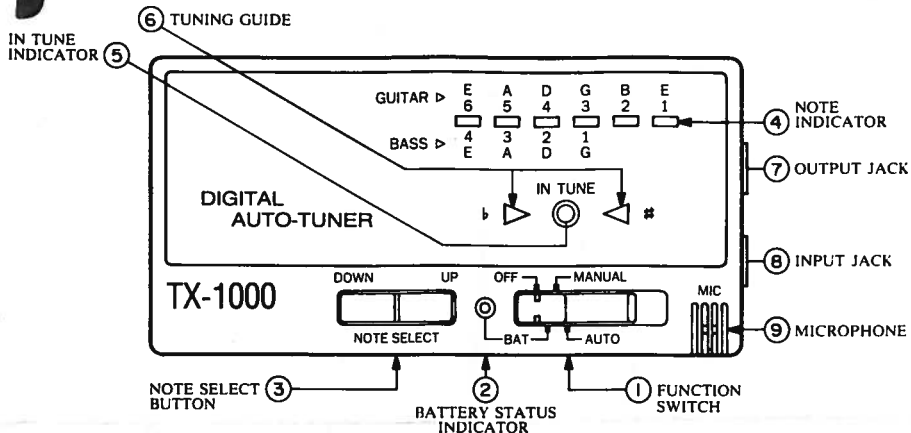


Tuning Method

There are two methods to tune your guitar with the TX1000 DIGITAL AUTO TUNER.

A. MANUAL METHOD

- Slide the FUNCTION SWITCH ① to MANUAL position.
- If you are tuning an acoustic instrument, position the instrument as close as possible to the MICROPHONE ⑨ on the tuner.
Connect electronic instruments to the tuner through the INPUT JACK ⑧.
You can further connect the tuner to an amplifier through the OUTPUT JACK ⑦.
* Signal entered through the INPUT JACK ⑧ is passed through to the OUTPUT JACK ⑦ independent of whether the TX1000 is On or Off.
To prevent noise, set the FUNCTION SWITCH ① to OFF position during playing.
- Select the desired note you wish to tune by pressing the NOTE SELECT BUTTON ③ either up or down until the LED light indicates the note you wish to tune. (In this case "A")

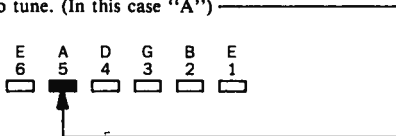


- Tune the instrument until the IN TUNE INDICATOR ⑤ for the desired note lights up. The TUNING GUIDES ⑥ to the left and right will guide you to the IN TUNE ⑤ position as these will indicate if the note is flat or sharp.



B. AUTO METHOD

 - Slide the FUNCTION SWITCH ① to AUTO position.
- Refer to A.2 (above)
- Play a note on the instrument. The NOTE INDICATOR ④ which is closest to the note played will light up.
(eg) If the note you play is close to A (Guitar 5th string) the note indicator will show:

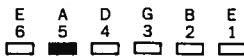

- Tune the instrument until the IN TUNE INDICATOR ⑤ for the desired note lights up. The TUNING GUIDES ⑥ to the left and right will guide you to the IN TUNE ⑤ position as these will indicate if the note is flat or sharp.



Battery Check


Slide the FUNCTION SWITCH ① to BAT position.
If the LED STATUS INDICATOR ② does not light, this indicates that the battery level is low.
Install a new battery.

Care of the tuner

- *Do not use the tuner in locations of high temperature and high humidity. Also avoid dusty places or locations where the tuner will be subject to strong vibrations. Do not leave the tuner in direct sunlight.
- *Always remember to turn the FUNCTION SWITCH ① off, after use.
- *Remove the batteries when the tuner is not to be used for extended periods. If you forget to remove the batteries and they leak, wipe away any residual fluid with a cloth before loading new batteries.
- *Use only a soft cloth to clean the tuner. Under no circumstances use solvents, such as thinners or alcohol, since these will damage the tuner's cabinet.

Specifications

Displays: Tuning guide (3 LEDs)
Note/Pitch indicator (6 LEDs)
Measuring Range: E1 (329.6Hz)-E6 (82.4Hz) Six string Guitar
G1 (195.99Hz) - E4 (41.2Hz) Bass Guitar
Accuracy: ± 1%
Terminals: Output Jack
Input jack
Power Supply: 9V
Dimensions: 120(W)×23(H)×60(D) mm
Weight: 95g (without battery)

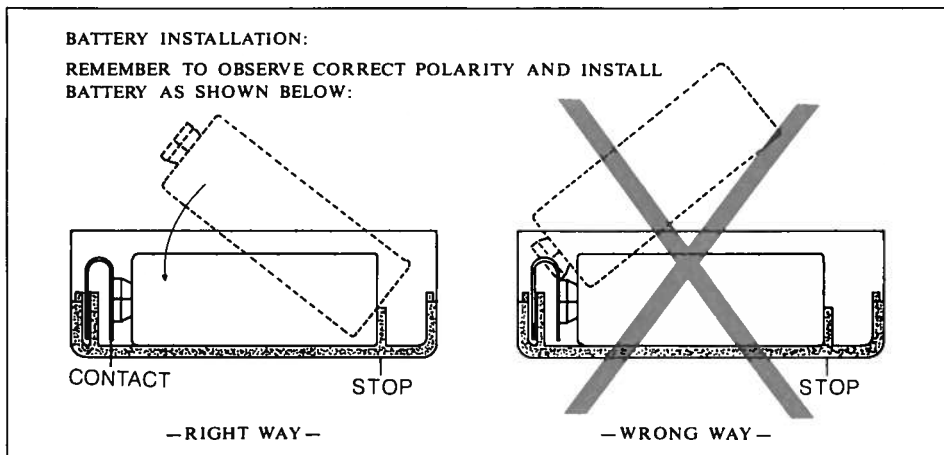

MADE IN KOREA