

OWNER'S MANUAL

Fender [®]

**MUSICAL INSTRUMENTS
1300 E. Valencia, Fullerton, California 92631**

SUPER TWIN AMPLIFIER

MANUAL NO. 012874 (H/GE)

Fender[®]

 
SUPER TWIN AMPLIFIER

Your selection of a Fender amplifier will be rewarded with years of quality music in a wide range of controlled sounds.

This manual is designed to familiarize you with the equipment and acquaint you with its many fine features. Read it carefully so that you will benefit from all of the features as soon as you start using the amplifier.


FEATURES

- 180 Watts RMS power with 395 *Watts* peak music power.
- Equalization and Harmonic Balance *controls* for maximum "cut" and "boost" and *emphasis* at selected frequency bands.
- DISTORTION and OUTPUT *controls* allow any desired degree of *distortion* to be maintained at any volume *level* without readjustment.
- Foot control, with EQUALIZATION and *DISTORTION* switches, allows either function *to be* in or out instantly.
- PRESENCE control for more "bite."
- Rugged Fender construction and *design* protects and maintains professional appearance.
- Special fabric reinforced vinyl covering.
- Two 12 inch speakers especially *designed* for long life under demanding use.

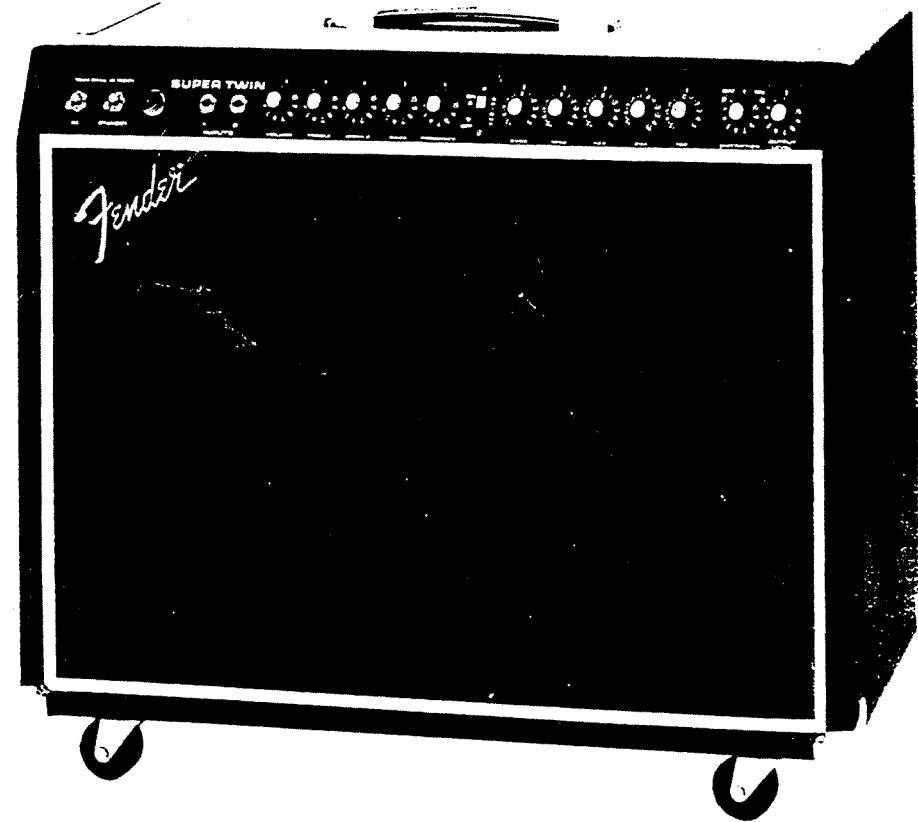

IT IS BEST TO REMOVE THE AMPLIFIER CASTERS
DURING PLAYING.

 FRONT PANEL

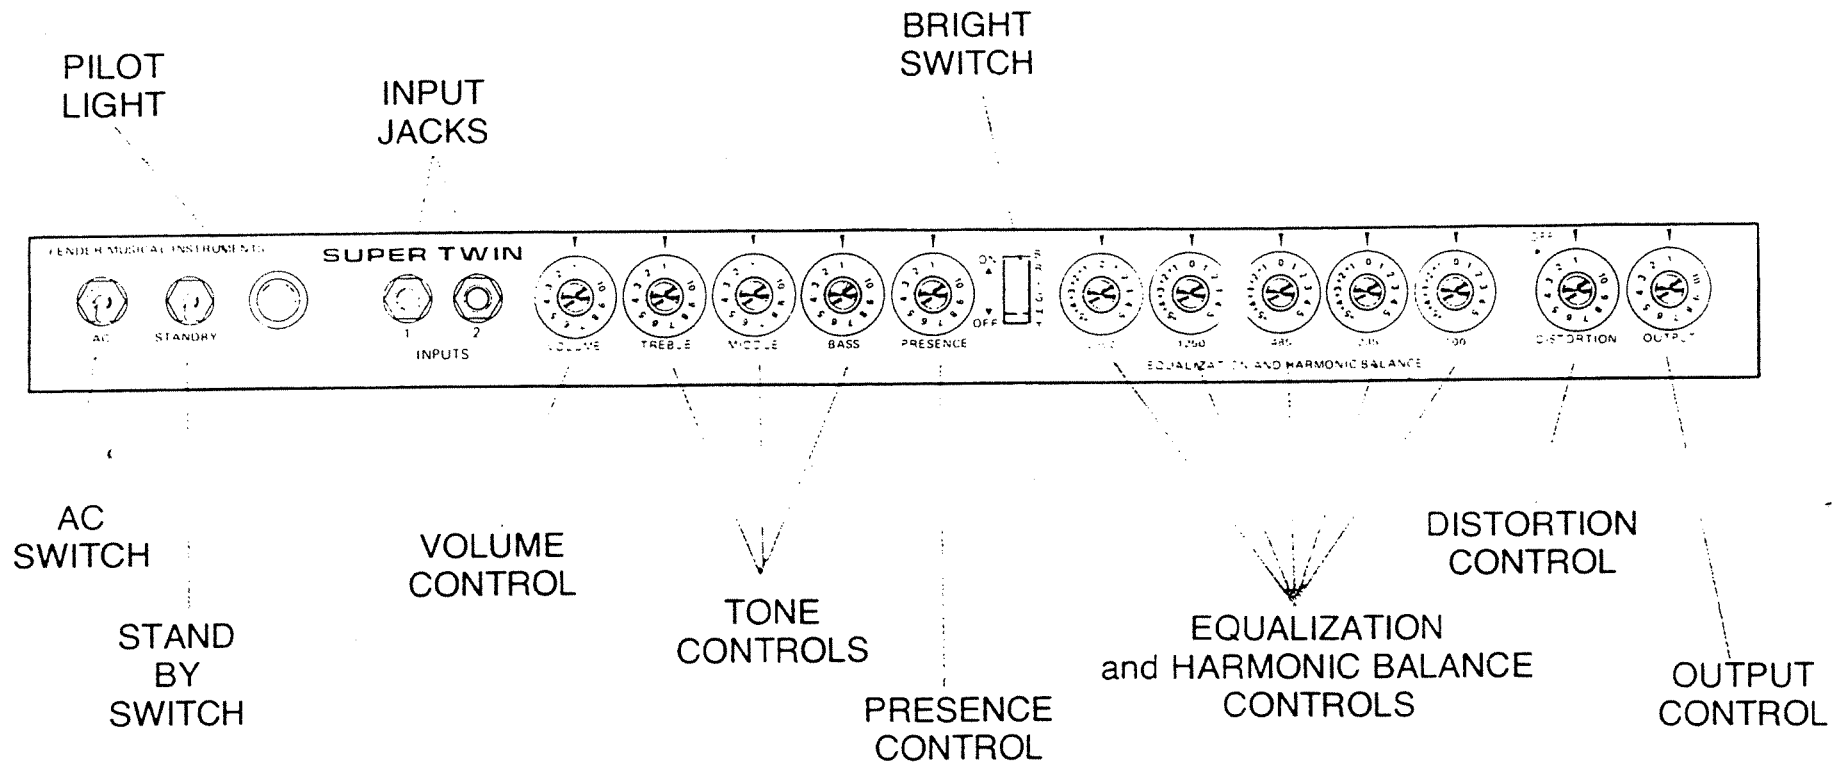

FRONT PANEL FUNCTIONS

On/Off switch turns amplifier on and off.

WARM-UP

Allows tube filaments to remain heated during standby periods. Amplification is instantly available without warm-up time. No danger of unwanted sound during quiet periods.

POWER LIGHT

Lights when AC switch is on. Indicates ON/Off position of AC switch.

INPUT JACKS

Instrument may be plugged into either jack.

VOLUME CONTROL

Adjusts volume to desired level. This control is also used with the Output Level and Distortion controls to control the volume of a distorted sound without changing the quality of the distortion.

tone controls

TREBLE CONTROL—Provides additional high frequencies as desired. Complemented by bright switch.

MIDDLE CONTROL—Adds rich tone and accents middle register.

BASS CONTROL—Regulates desired amount of bass response.

PRESENCE CONTROL

Adds more "bite" by boosting the higher frequencies.

BRIGHT SWITCH

Adds brilliance to all notes, especially the higher frequencies.

EQUALIZATION and HARMONIC BALANCE

Each control affects the band of frequencies above and below the indicated frequency. The foot switch allows the effects to be cut in or out instantaneously.

DISTORTION CONTROL and OUTPUT CONTROL

These two controls provide a wide range of distortion effects and allow uniform, controlled distortion at any volume level.

Note: EQUALIZER and DISTORTION foot pedal plugs into two jacks on back panel. (Further description on next page.)

 
HOW TO CONTROL DISTORTION AND VOLUME

For **Minimum Distortion** turn the DISTORTION control counter-clockwise until you feel a click. The DISTORTION foot switch is now non-functional. Set the OUTPUT LEVEL control to 10 and adjust the sound output with the VOLUME control.

For **Maximum Distortion** set the guitar volume on full. Set the amplifier VOLUME and DISTORTION controls to maximum. Adjust the sound output with the OUTPUT control. The foot switch provides selection of high or low distortion without substantially altering the overall sound output.

The distortion level may be lowered by turning down the VOLUME and/or DISTORTION controls and turning up the OUTPUT control.

REAR PANEL

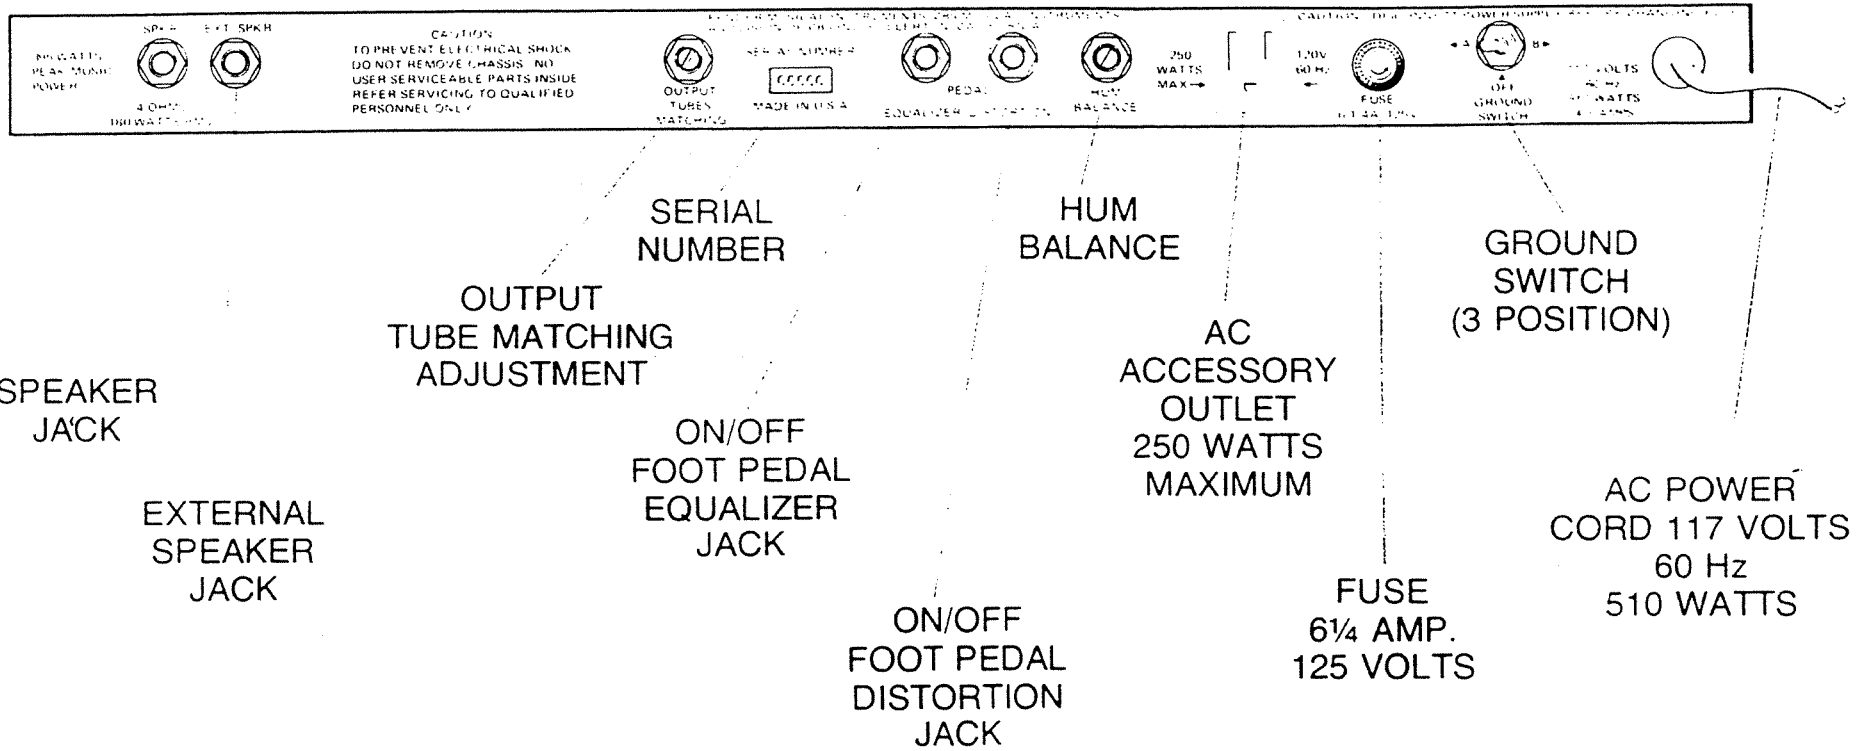

REAR PANEL FUNCTIONS

SPEAKER JACK

Connects internal speakers to amplifier.

EXTENSION SPEAKER JACK

Provides a connection for an external speaker enclosure.

OUTPUT LEVEL CONTROL

This control makes it unnecessary to use matched power output tubes for optimum performance.

Best balance is obtained by setting the OUTPUT LEVEL to "1" and adjusting for minimum hum level. Ordinarily, no adjustment should be required unless the output tubes are changed.

EQUALIZER JACK

Used to connect EQUALIZER switch side of foot pedal to amplifier for instant on/off control. Use shielded lead plug.

DISTORTION PEDAL JACK

Used to connect DISTORTION switch side of foot pedal to amplifier for instant on/off control. Use unshielded lead plug.

HUM BALANCE

After the "GROUND SWITCH"

has been positioned to minimum hum, the hum balance may be used to further reduce hum. This control should not need adjustment unless tubes or other components are changed.

A.C. ACCESSORY OUTLET

(120 V AC, 60 Hz) (Load limit 250 Watts) This socket is provided as a convenience outlet for any A.C. accessory.

FUSE

6¼ Amp 125 Volts

CAUTION: Disconnect amplifier A.C. plug from outlet before changing fuse.

Remove fuse by pressing in and unscrewing cap counter-clockwise. Replace only with Littlefuse No. 3136.25 or Bussman fuse No. MDL 6¼.

GROUND SWITCH

Gives player control of polarity. Positions "A" and "B" ground to each side of the line respectively. The "OFF" position disconnects all but the third line chassis ground. Try each position to find minimum hum condition.

CORRECTIVE CHECK LIST

If your amp is set up but does not function, check the following items:

- Is the amp power supply cable plugged into the wall?
- Is there power at the wall outlet where the amp is plugged in?
- Is the speaker plugged into the amplifier speaker jack?
- Are the tone control knobs turned up above 4?
- Is the volume control on your instrument turned up?
- Is the fuse good?

If, after checking all of the above, the system is still not performing correctly, consult your authorized Fender Service Dealer.

CARE OF VINYL COVERING

If the vinyl covering and handles require cleaning, use a mild soap and warm water solution, rinse with a damp cloth, and buff dry with a terry cloth. This will restore the original luster.

 
TUBE REPLACEMENT

If the amplifier should require new parts, they will be replaced under the term of the warranty stated in the back of this manual. Your authorized Fender Dealer will have parts in stock, or he can obtain them quickly for you.

If a tube should need replacement and no Fender Dealer is available, an electronic store can usually supply the tube required, but not under the warranty. The schematic furnished with this manual will be helpful at that time.


Fender Musical Instruments furnishes warranty service only through authorized Fender Dealers.

ACCESSORY ITEMS

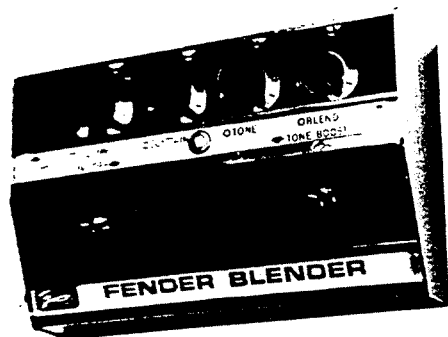


FENDER BLENDER

 Fuzz and sustain unit for sound modification. Blends and sustains tone to any pre-set level.

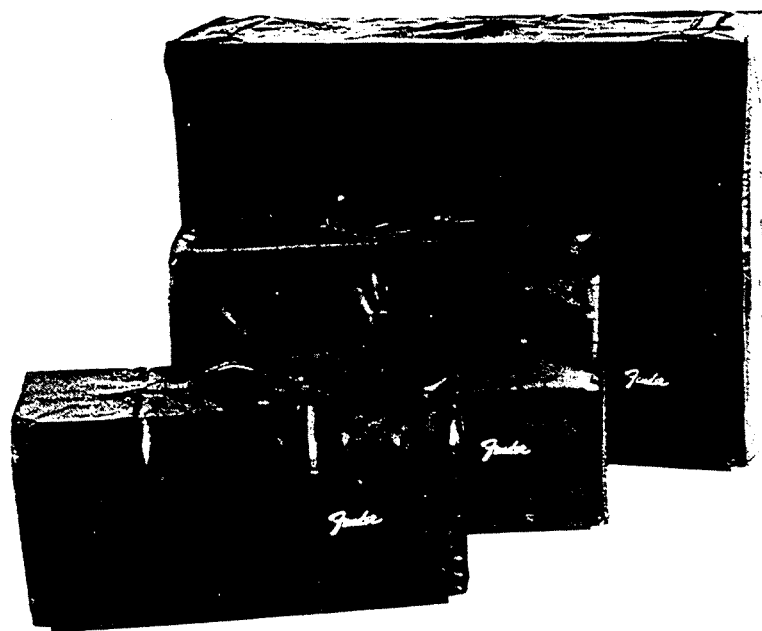


FENDER AMPLIFIER COVERS

 Waterproof, tear and abrasion-resistant amplifier covers are available for every Fender amp. They prevent surface damage to the amplifier and keep out dust. Lined with soft flannel, these black vinyl covers feature the amplifier model name and Fender trademark.

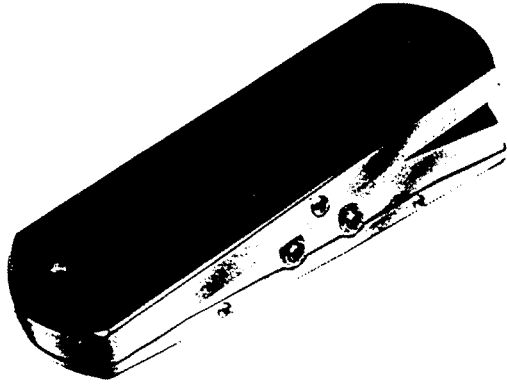


VOLUME PEDAL

 Controls volume level with smooth up and down action.

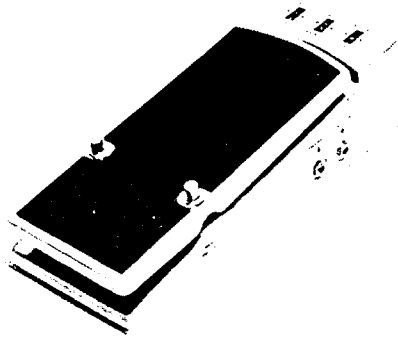

FUZZ WAH/VOLUME PEDAL

 Up and down foot control for the Fuzz, Wah and Volume. Separate foot switches for the Fuzz and Wah. Fingertip pre-setting of balance and blend of the Fuzz and Wah.

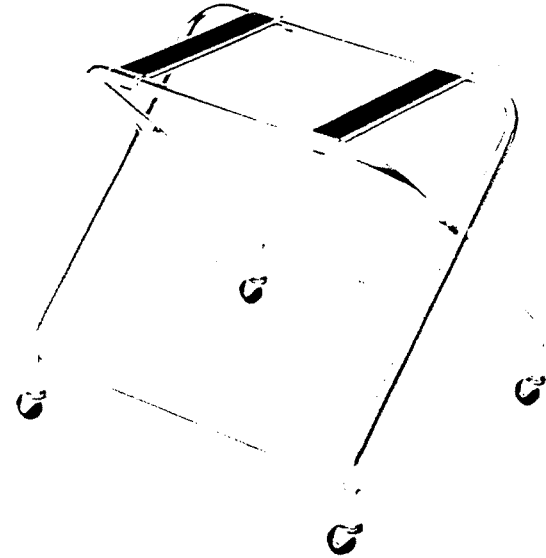

UNIVERSAL STAND

Designed to adapt to most amplifiers, this stand offers convenience casters and heavily plated all metal components. An excellent stand for many of the more compact self-contained amplifiers.