




JAMES BURTON TELECASTER UPGRADE[®], 010-8602

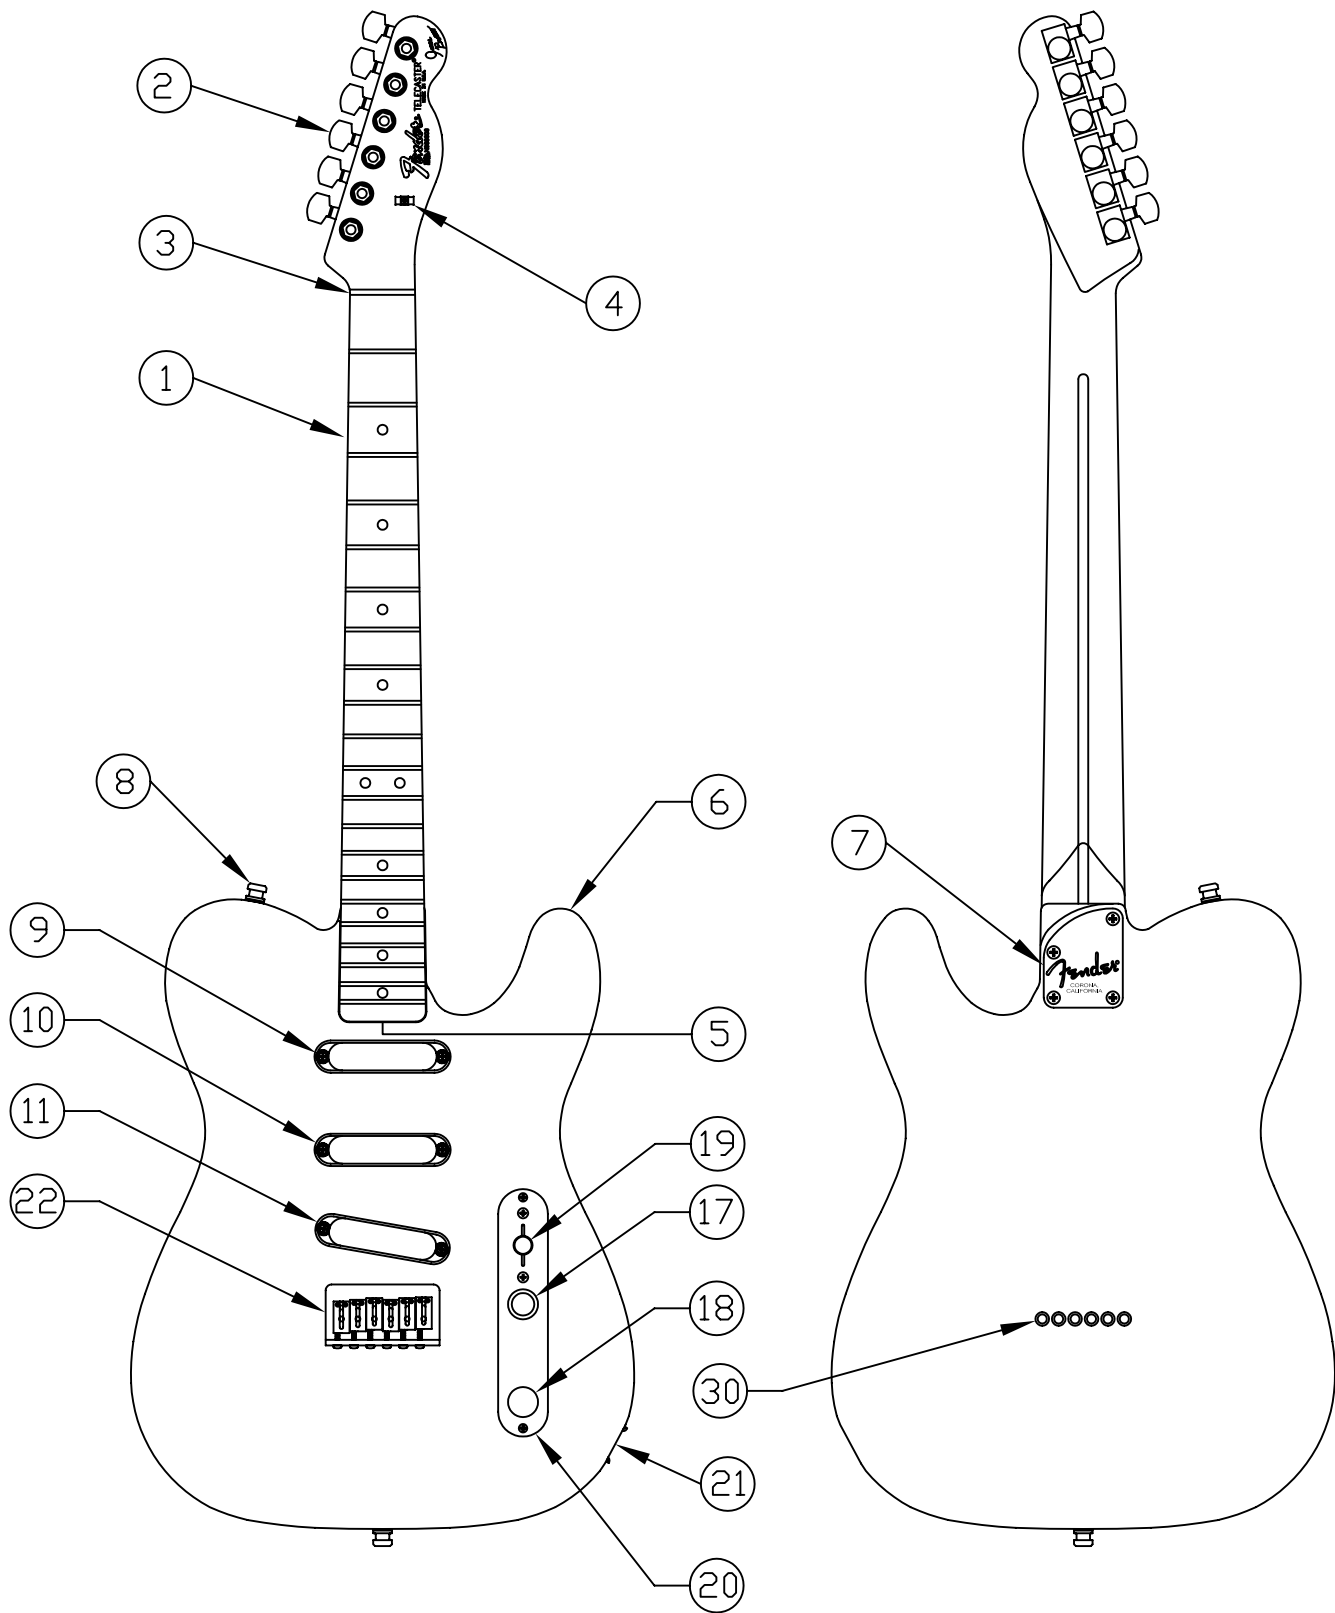

WIRING DIAGRAM

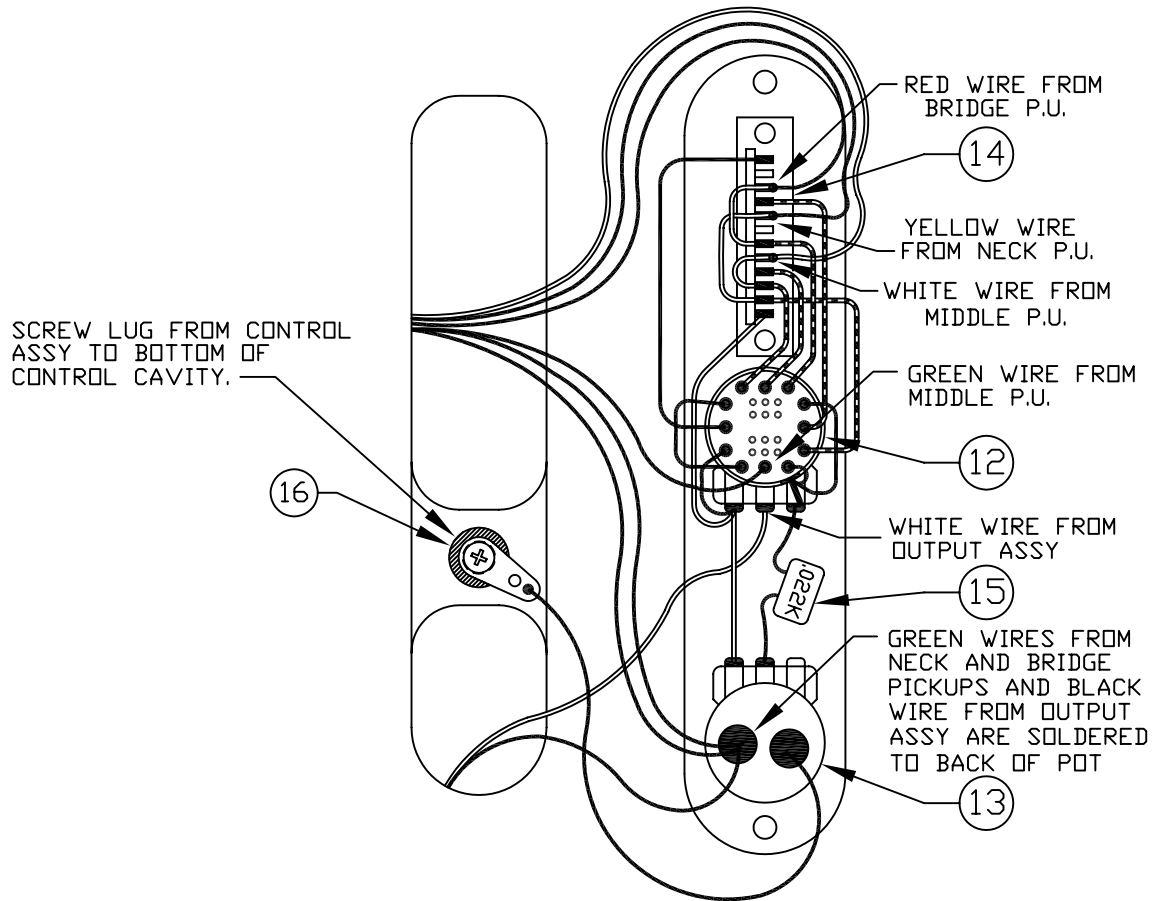

BRIDGE ASSEMBLY

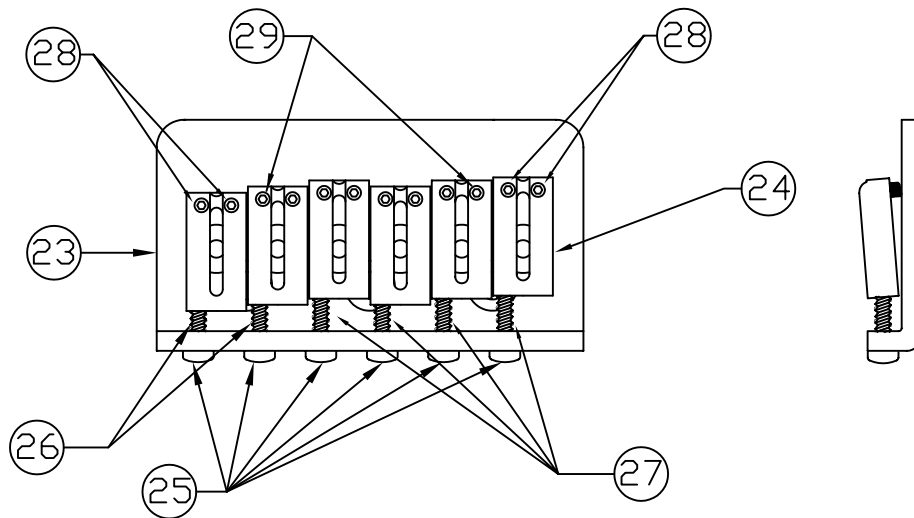


JAMES BURTON TELECASTER UPGRADE[®], 010-8602

REF.#	P/N	DESCRIPTION	REF.#	P/N	DESCRIPTION
1	0036559000	Neck, James Burton	22	0036808000	Bridge Assy, Am Std., Gold
2	0021942000	Tuning Key, XGE-1G Gold w/ Pearl		0036867000	Mounting Screw, Gold
	0058821000	Bushing	23	0036813000	Bridge Plate, Gold
	0058816000	Washer	24	0036815000	Bridge Section, Gold
3	0083675000	Bone Nut	25	0017031000	Intonation Screw (6)
4	0018803000	String Guide, Gold	26	0019395000	Intonation Spring (2)
	0018805000	Mounting Screw, Gold	27	0019394000	Intonation Spring (4)
	0020423000	Spacer	28	0026779000	Height Adjustment Screw (4)
5	0012252000	Truss Rod Adjustment Nut	29	0026780000	Height Adjustment Screw (8)
6	0071997587	Body, James Burton Tele, BRPR	30	0018876000	String Retainer Ferrule
	0071997588	Body, James Burton Tele, BBPF			
7	0071998000	Plate-Neck, Deluxe Gtr, Gold			
	0018785000	Mounting Screw, Gold			
8	0021950000	Strap Button, Gold			
	0018845000	Mounting Screw, Gold			
	0020491000	Washer, Felt White			
	0019056000	Washer, Felt Black			
9	0071798000	Pickup Assy, Neck			
	0036810000	Mounting Screw			
	0036563000	Washer			
	0036564000	O-Ring			
10	0071799000	Pickup Assy, Mid			
	0036810000	Mounting Screw			
	0036563000	Washer			
	0036564000	O-Ring			
11	0071800000	Pickup Assy, Bridge			
	0036810000	Mounting Screw			
	0036563000	Washer			
	0036564000	O-Ring			
12	0061260000	S-1 Sw/Pot Assy. - J. Burton Tele			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer			
13	0019064000	Control 250K Audio			
	0016352000	Mounting Hex Nut			
	0016436000	Lock Washer			
14	0039003000	Switch, Lever 5 Position			
	0018790000	Mounting Screw, Gold			
	0016436000	Lock Washer			
15	0024832000	Capacitor, .022uF, 250V			
16	0012869000	Solder Lug			
	0015116000	Mounting Screw			
17	0059273000	Switch Knob, Gold			
	0028897000	Set Screw, Gold			
	0059278000	Coupling Sleeve			
	0059271000	Switch Cap, Gold			
18	0059273000	Knob Control Burton, Gold			
	0028897000	Set Screw, Gold			
19	0018359000	Knob-Switch Vintage Tele			
20	0019336000	Control Plate Tele, Gold			
21	0040808000	Output Jack			
	0016436000	Lock Washer			
	0018824000	Mounting Hex Nut, Gold			
	0010363000	Jack Ferrule, Gold			



SWITCH & CONTROL FUNCTION

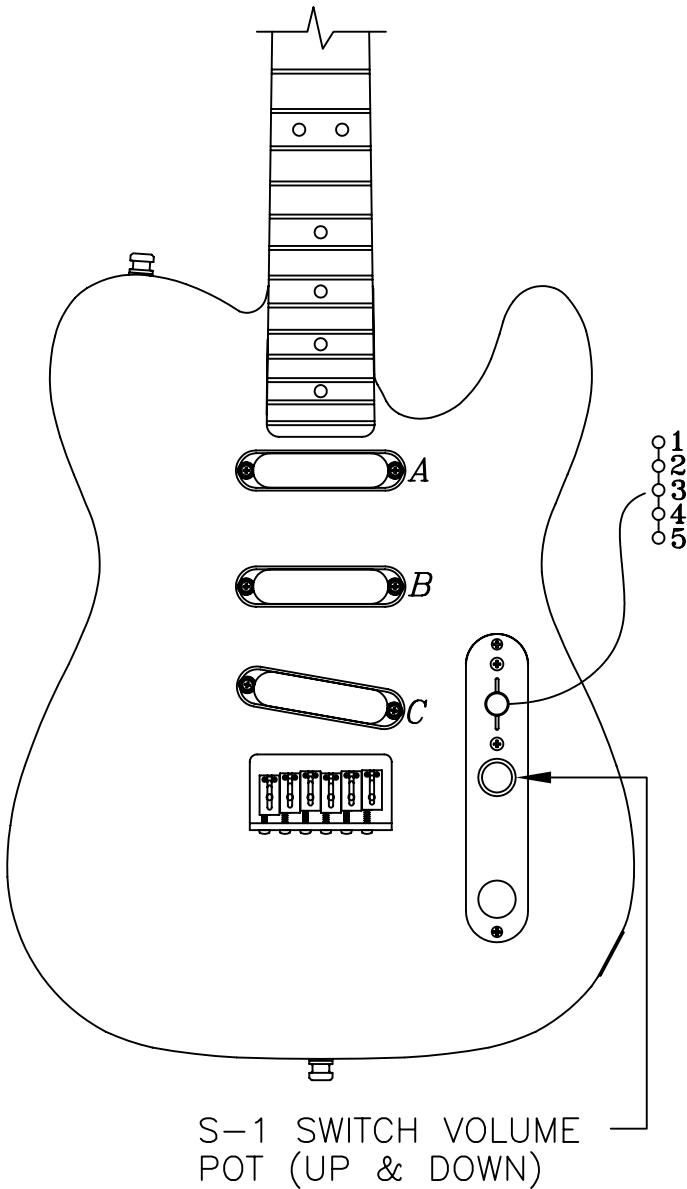

5 WAY SW POSITIONS, S-1 SWITCH UP					
1	2	3	4	5	POSITION
					NECK (A)
					MIDDLE (B)
					BRIDGE (C)
NECK ONLY	NECK & MIDDLE PARALLEL CONNECTION	NECK & BRIDGE PARALLEL CONNECTION	MIDDLE & BRIDGE PARALLEL CONNECTION	BRIDGE ONLY	CONNECTION

5 WAY SW POSITIONS, S-1 SWITCH DOWN					
1	2	3	4	5	POSITION
					NECK (A)
					MIDDLE (B)
					BRIDGE (C)
NECK ONLY	NECK & MIDDLE SERIES CONNECTION	MIDDLE ONLY	MIDDLE & BRIDGE SERIES CONNECTION	BRIDGE ONLY	CONNECTION

	PICKUP IS ON
	PICKUP IS OFF
<i>A</i>	PICKUP (NECK)
<i>B</i>	PICKUP (MIDDLE)
<i>C</i>	PICKUP (BRIDGE)

