




JIM ROOT TELECASTER®, 013-4444

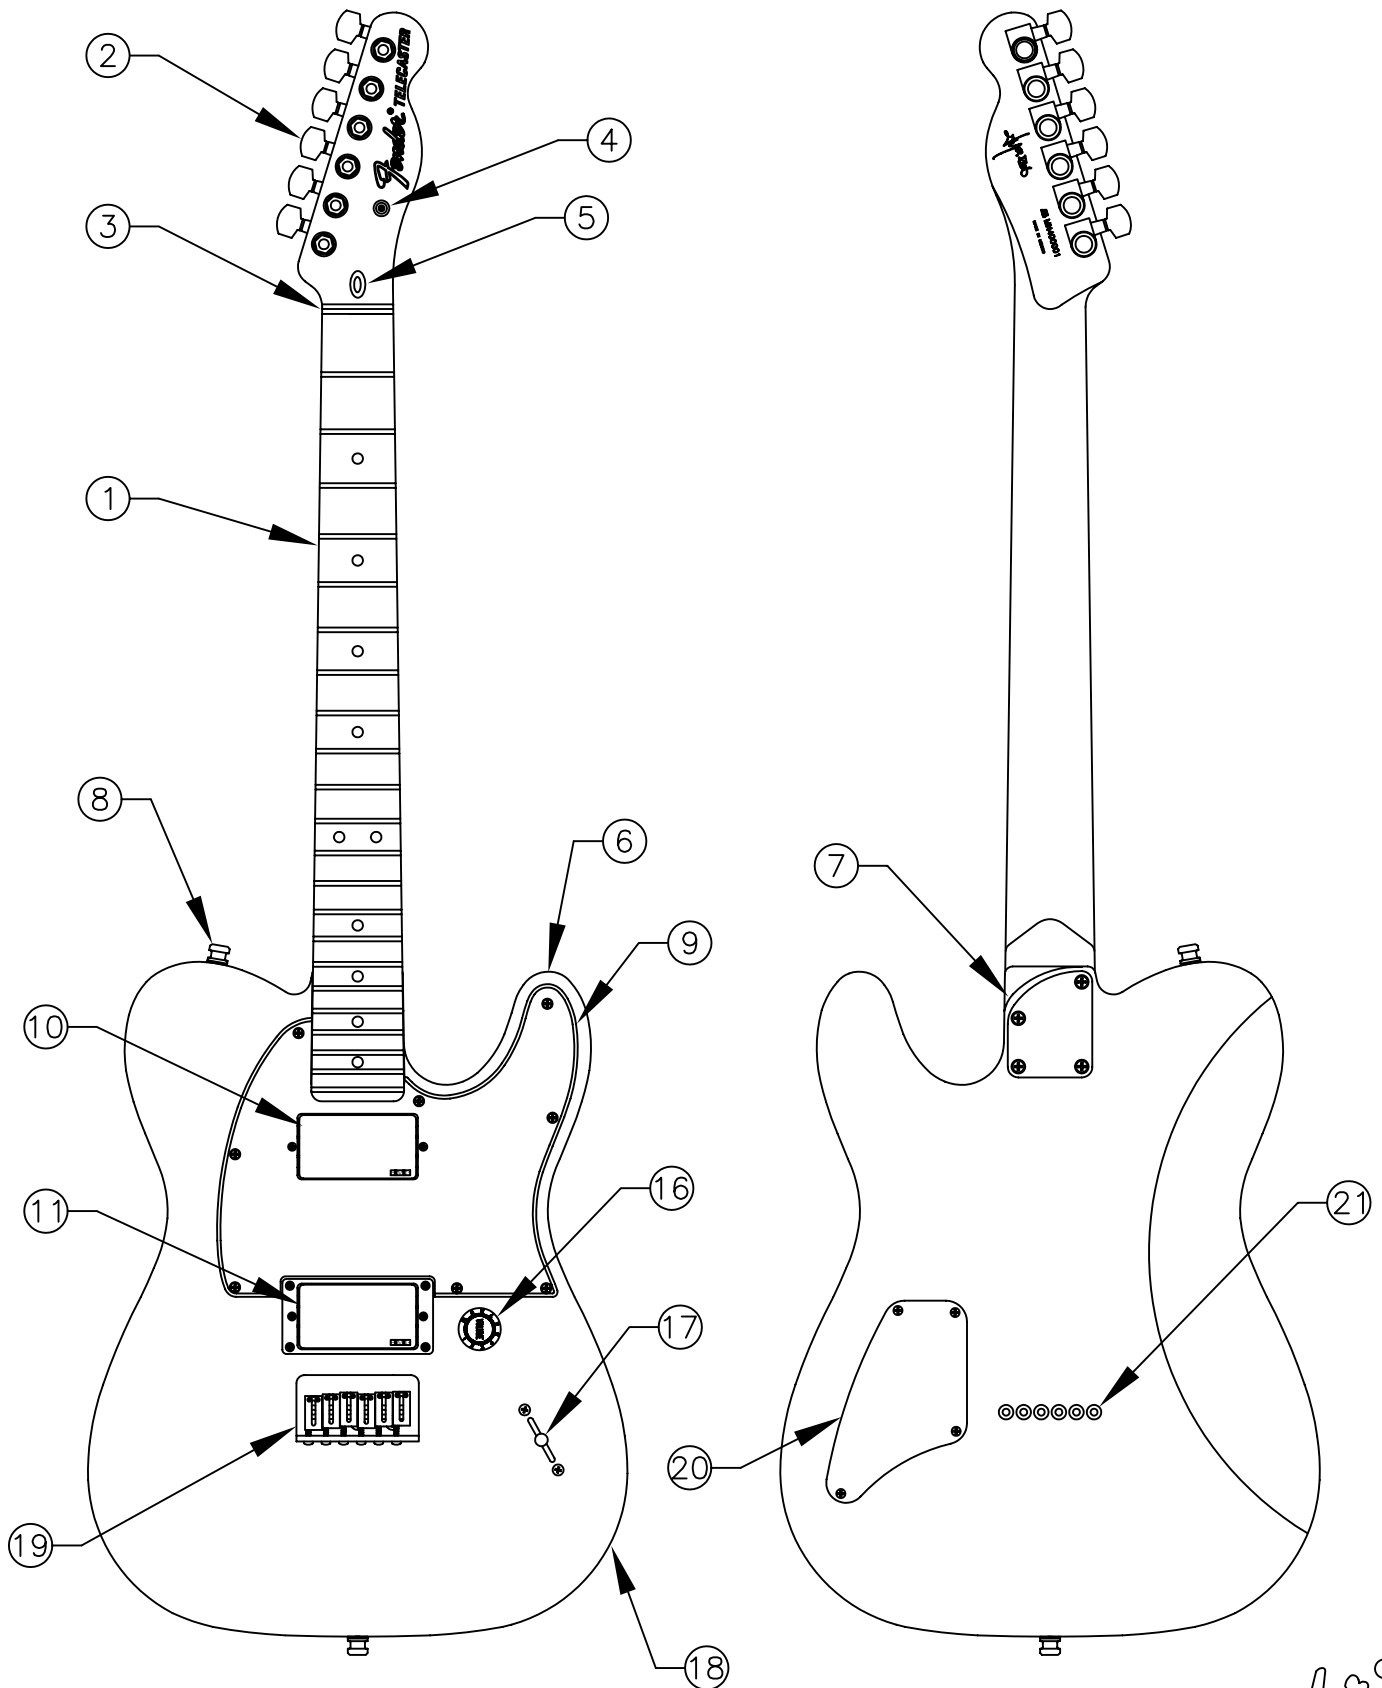

WIRING DIAGRAM

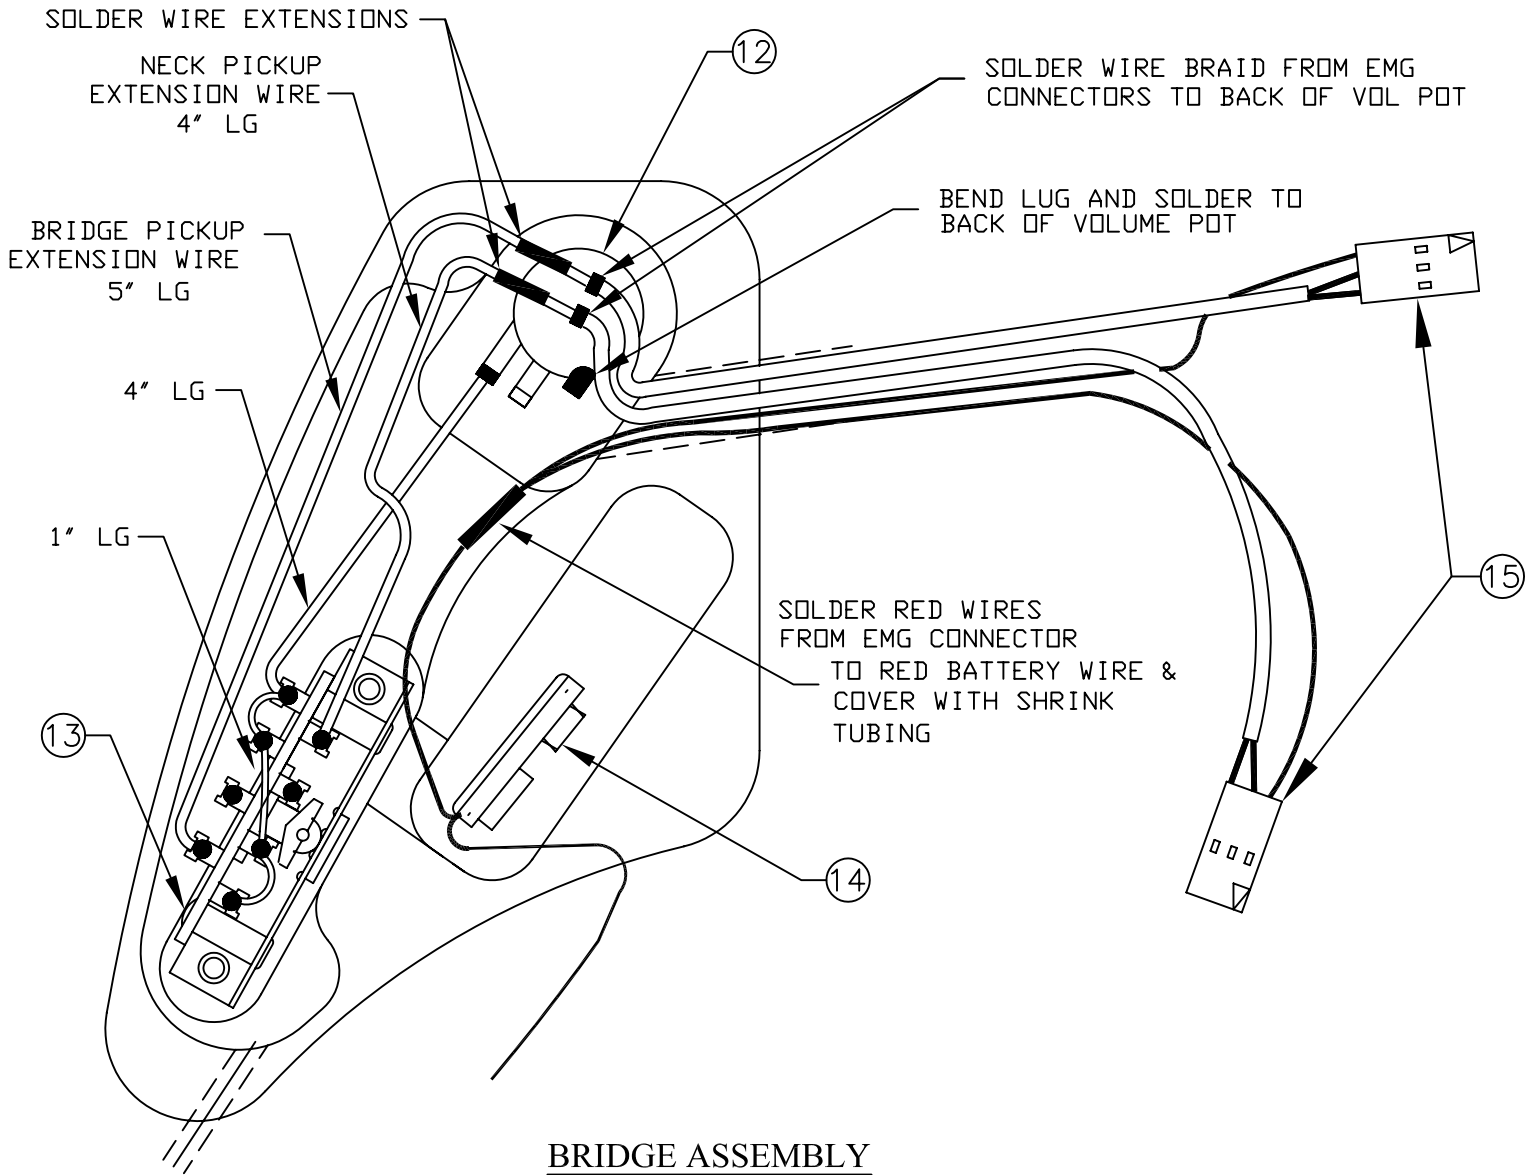

BRIDGE ASSEMBLY

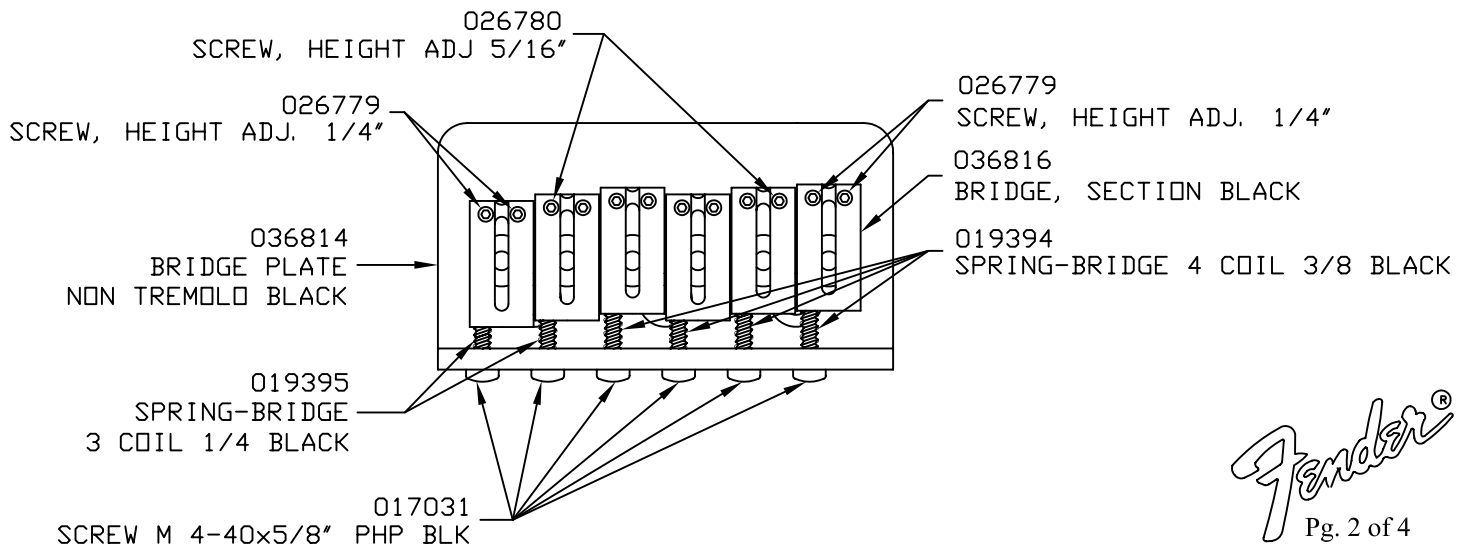

JIM ROOT TELECASTER® , 013-4444

REF.#	P/N	DESCRIPTION
1	See Chart	Neck, Jim Root Telecaster®
2	0061444000	Tuning Key w/ Lock, 4,5,6 - Ultra Black
	0061443000	Tuning Key w/ Lock, 1,2,3 - Ultra Black
	0063289000	Washer, Black
	0063290000	Bushing, Black
3	0083675000	Bone Nut
4	0018365010	String Guide, Vintage Tele, Black
	0018113000	Mounting Screw
5	0038467000	Truss Rod Adjusting Wrench
6	See Chart	Body, Jim Root Telecaster®
7	0074243000	Neck Plate
	0036820000	Mounting Screw
8	0036821000	Strap Button, Black
	0036822000	Mounting Screw
	0019056000	Felt Washer, Black
9	See Chart	Pickguard, Jim Root Tele, Black
	0018113000	Mounting Screw, Black
10	0065662000	Pickup, EMG 60, Neck
	0054118000	Mounting Screw
	0050167000	Mounting Spring
11	0065660001	Pickup, EMG 81, Bridge
	0054118000	Mounting Screw
	0050167000	Mounting Spring
	9280500412	Bezel, Black
	9280530407	Mounting Screw
12	0074239000	Control 25K Audio, Volume
13	0053290000	Selector Switch, 3 way
14	0017458000	Plug, 9V Battery
15	0074240000	Quick Connect, Cable Assy, EMG
16	0056147000	Knob, Volume, Black
17	0013267000	Knob, Selector Switch, Black
	0075500000	Mounting Screw, Black
18	0074238000	Output Jack Assy,
	0018113000	Mounting Screw
19	0036809000	Bridge Assembly, Black
	0036866000	Mounting Screw, Black
20	0061207000	Cover, Back Plate
	0030654000	Mounting Screw, Black
	0056748000	Insert
	0017405000	Battery, 9V
21	0036823000	Ferrule, String Retainer, Black

COMBINATION CHART

REF#	PART DESCRIPTION	CATALOG NUMBERS	
		0134444780	0134444706
1	NECK	0074245000/EBONY	0074206000/MPL
6	BODY	0074203780/AWT	0074203706/BLK
9	PICKGUARD	0074204002/BLK	0074246002-WHT



SWITCH & CONTROL FUNCTION

3 WAY SWITCH POSITION			
3	2	1	
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH
	PICKUP IS OFF		
A	PICKUP (NECK)		1
B	PICKUP (BRIDGE)		

