Fender®
GODZILLA
ゴジラ
DISTORTION

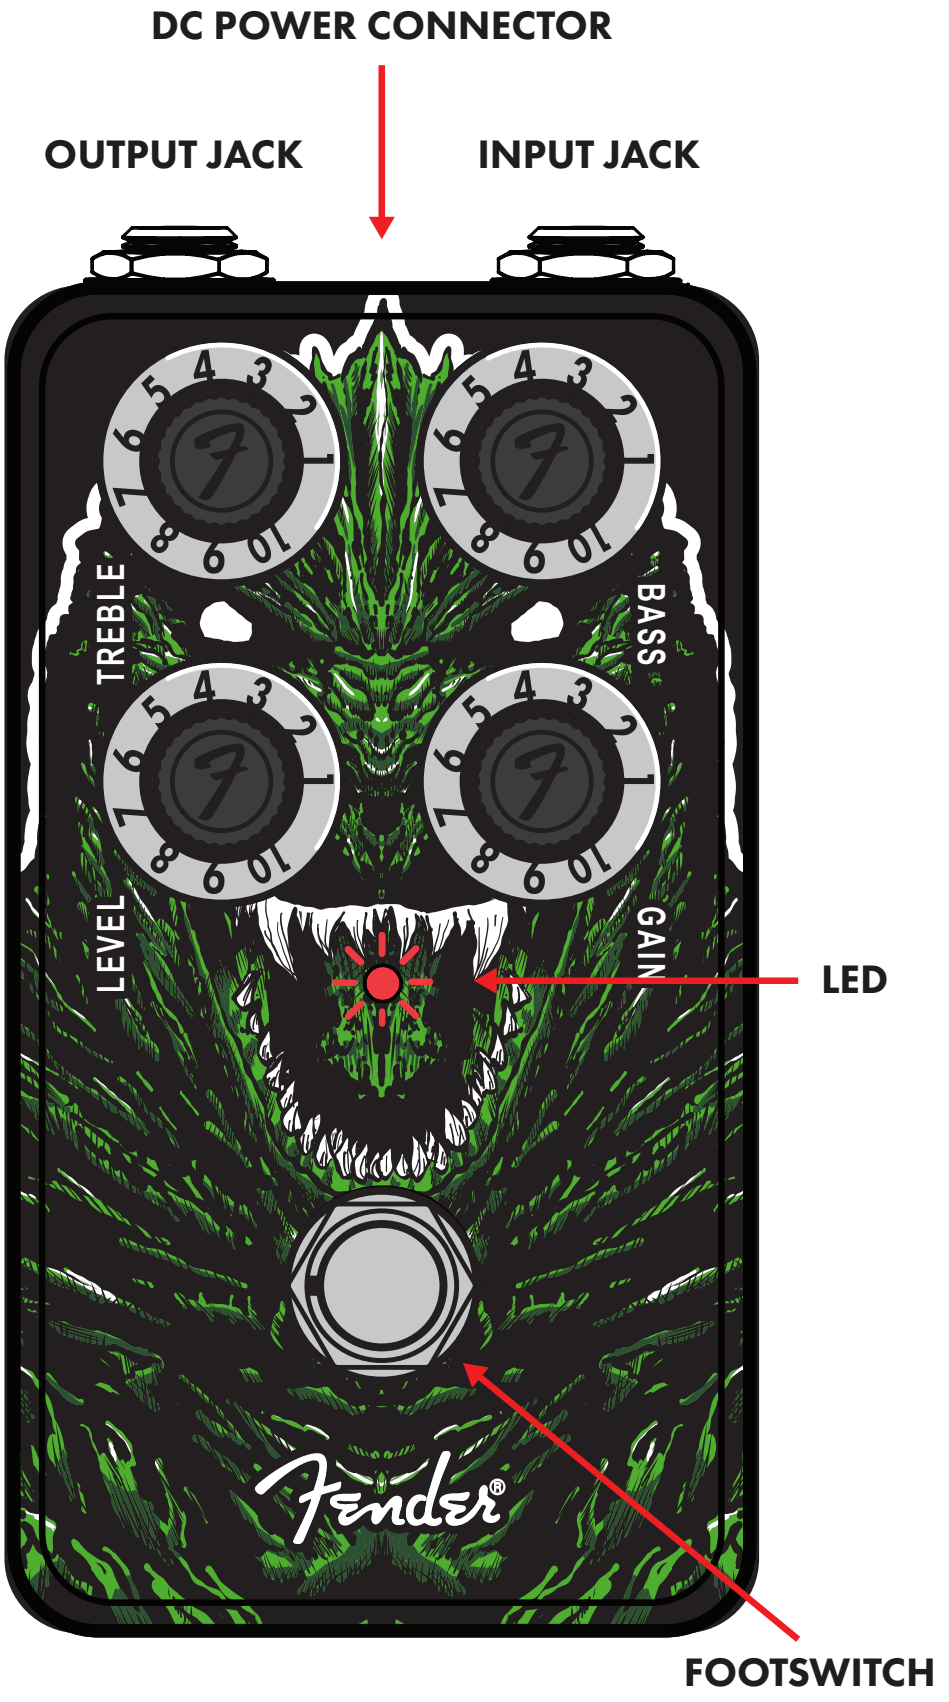

9V BATTERY SCREW ACCESS ON REAR

OUTPUT JACK
Low-impedance output connects to amp or next pedal in signal chain.

INPUT JACK
High-impedance input for electric guitar, bass, acoustic guitars with pickup systems, keyboards and other instruments.

DC POWER CONNECTOR
Connect DC adapter here. Standard center-negative 9VDC jack for use with appropriate power supplies.

TREBLE CONTROL KNOB
Adjusts treble frequency level.

BASS CONTROL KNOB
Adjusts bass frequency level.

LEVEL CONTROL KNOB
Adjusts volume of distortion effect.

GAIN CONTROL KNOB
Adjusts gain level from a low-gain overdrive to full-blown high-gain distortion.

LED
Illuminates when effect is on.

FOOTSWITCH
Turns effect on and off.

BATTERY COMPARTMENT (REAR)
Screw-access compartment houses one 9V battery.

INTERNAL TRIM POTENTIOMETERS (ACCESSIBLE BY REMOVING COVER)

MIDRANGE trim pot is an EQ cut/boost control and is flat when set in the center.

FILTER trim pot is a low-pass filter that helps remove excess high-frequency energy or "fizz" (around 4kHz and higher) from brighter-sounding amplifiers.

Remove cover using a flat-head screwdriver. Adjust trim pots using a Phillips-head screwdriver.

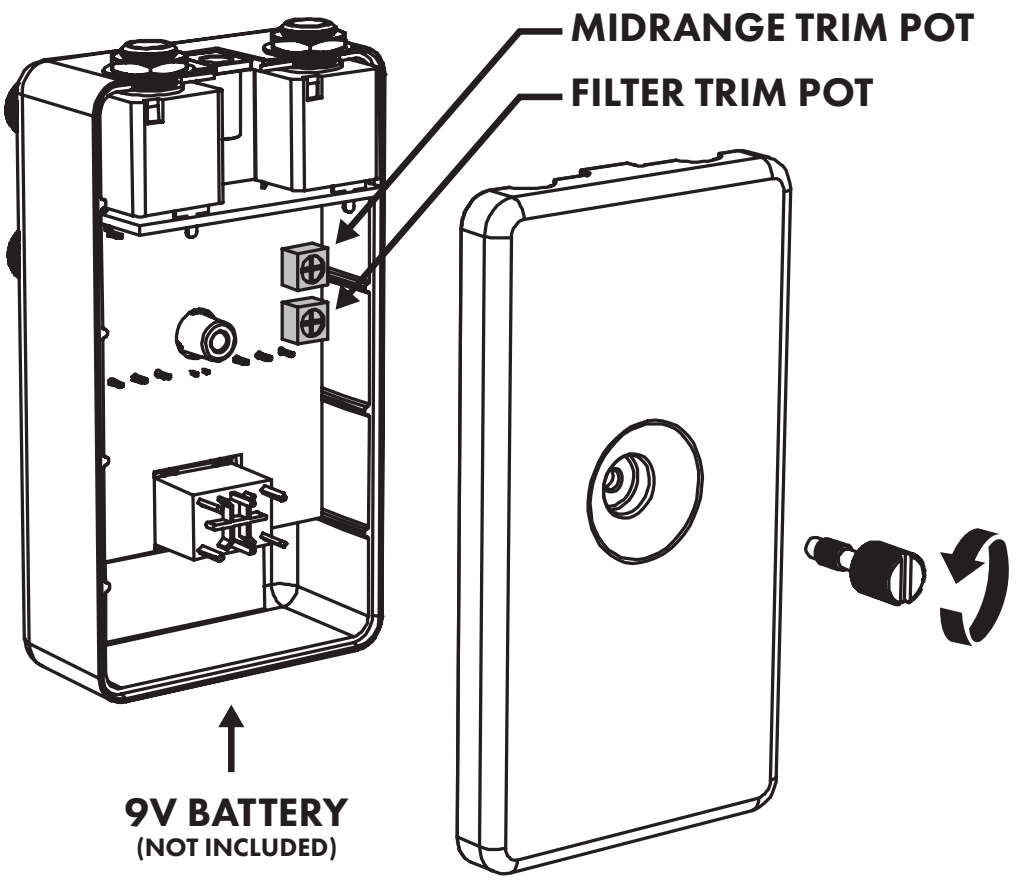

IMPORTANT SAFETY INSTRUCTIONS

- WARNING: To prevent damage, fire or shock hazard, do not expose the unit or its AC power to rain or moisture.
- Do not alter the AC plug of the connected power adapter
- Do not drip or splash liquids on the unit.
- No user serviceable parts inside, refer servicing to qualified personnel only.
- WARNING: The unit must only be connected to a safety agency certified, regulated, power source (adapter), approved for use and compliant with applicable local and national regulatory safety requirements.
- Unplug the AC power adapter before cleaning the unit exterior. Use only a damp cloth for cleaning and then wait until the unit is completely dry before reconnecting it to power.
- Amplifiers and loudspeaker systems, and ear/headphones (if equipped) are capable of producing very high sound pressure levels which may cause temporary or permanent hearing damage. Use care when setting and adjusting volume levels during use.

Information for users on collection and disposal of old equipment and used batteries:

These symbols on the products, packaging and/or accompanying documents mean that used electrical and electronic products and batteries should not be mixed with general household waste.

For proper treatment, recovery and recycling of old products and used batteries, please take them to applicable collection points, in accordance with your national legislation.

By disposing of these products and batteries correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment which could otherwise arise from inappropriate waste handling.

For more information about collection and recycling of old products and batteries, please contact your local municipality, your waste disposal service or the point of sale where you purchased the items.

For business users in the European Union:

If you wish to discard electrical and electronic equipment, please contact your dealer or supplier for further information.

PRECAUTIONS — PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe and handy place for future reference.

⚠ WARNING

Always follow the basic precautions listed below to avoid the possibility of serious injury or even death from electrical shock, short circuiting, damages, fire or other hazards. These precautions include, but are not limited to, the following:

Water warning

• Do not expose the pedal to rain, use it near water or in damp or wet conditions, place it on any containers (such as vases, bottles or glasses) containing liquids that might spill into any openings.

Battery

• Follow the precautions below. Failure to do so might result in explosion, fire, overheating or battery fluid leakage.

- Do not tamper with or disassemble batteries.
- Do not dispose of batteries in fire.
- Do not attempt to recharge batteries that are not designed to be charged.
- Keep the batteries separate from metallic objects such as necklaces, hairpins, coins and keys.
- Use the specified battery type only.
- Use new batteries, all of which are the same type, same model and made by the same manufacturer.
- Always make sure all batteries are inserted in conformity with the +/- polarity markings.
- When the batteries run out, or if the pedal is not to be used for a long time, remove the batteries from the pedal.

• Keep batteries away from small children, who might accidentally swallow them.

• If the batteries do leak, avoid contact with the leaked fluid. If the battery fluid should come in contact with your eyes, mouth or skin, wash immediately with water and consult a doctor. Battery fluid is corrosive and may possibly cause chemical burns or loss of sight.

INSTRUCTIONS DE SÉCURITÉ IMPORTANTES

- AVERTISSEMENT : Pour éviter tout dommage, risque d'incendie ou de choc électrique, n'exposez pas l'appareil ou son alimentation CA à la pluie ou à l'humidité.
- Ne modifiez pas la fiche CA de l'adaptateur secteur connecté.
- Ne versez pas et n'éclaboussez pas de liquides sur l'appareil.
- Aucune pièce réparable par l'utilisateur à l'intérieur, confiez l'entretien uniquement à du personnel qualifié.
- AVERTISSEMENT : L'appareil ne doit être connecté qu'à une source d'alimentation (adaptateur) certifiée par un organisme de sécurité, régulée, approuvée pour utilisation et conforme aux exigences de sécurité réglementaires locales et nationales applicables.
- Débranchez l'adaptateur secteur CA avant de nettoyer l'extérieur de l'appareil. Utilisez uniquement un chiffon humide pour le nettoyage, puis attendez que l'appareil soit complètement sec avant de le rebrancher à l'alimentation.
- Les amplificateurs et systèmes de haut-parleurs, ainsi que les écouteurs/casques (si équipés) sont capables de produire des niveaux de pression acoustique très élevés qui peuvent causer des dommages auditifs temporaires ou permanents. Faites attention lors du réglage des niveaux de volume pendant l'utilisation.

Informations destinées aux utilisateurs concernant la collecte et l'élimination des anciens équipements et des batteries usagées :

Ces symboles sur les produits, emballages et/ou documents d'accompagnement signifient que les produits électriques et électroniques usagés et les batteries ne doivent pas être mélangés aux déchets ménagers généraux.

Pour un traitement, une récupération et un recyclage appropriés des anciens produits et des batteries usagées, veuillez les apporter aux points de collecte applicables, conformément à votre législation nationale.

En éliminant correctement ces produits et batteries, vous contribuerez à préserver des ressources précieuses et à prévenir tout effet négatif potentiel sur la santé humaine et l'environnement qui pourrait autrement résulter d'une manipulation inappropriée des déchets.

Pour plus d'informations sur la collecte et le recyclage des anciens produits et batteries, veuillez contacter votre municipalité locale, votre service d'élimination des déchets ou le point de vente où vous avez acheté les articles.

Pour les utilisateurs professionnels dans l'Union européenne :

Si vous souhaitez vous débarrasser d'équipements électriques et électroniques, veuillez contacter votre revendeur ou fournisseur pour obtenir de plus amples informations.

PRÉCAUTIONS — VEUILLEZ LIRE ATTENTIVEMENT AVANT DE CONTINUER

Veuillez conserver ce manuel dans un endroit sûr et facilement accessible pour référence future.

AVERTISSEMENT

Suivez toujours les précautions de base énumérées ci-dessous pour éviter la possibilité de blessures graves ou même la mort par choc électrique, court-circuit, dommages, incendie ou autres dangers. Ces précautions incluent, mais ne se limitent pas aux suivantes :

Avertissement concernant l'eau

• N'exposez pas la pédale à la pluie, ne l'utilisez pas près de l'eau ou dans des conditions humides ou mouillées, ne le placez pas sur des contenants (tels que vases, bouteilles ou verres) contenant des liquides qui pourraient se renverser dans les ouvertures.

Batterie

• Suivez les précautions ci-dessous. Le non-respect de ces précautions pourrait entraîner une explosion, un incendie, une surchauffe ou une fuite du liquide de la batterie.

- Ne manipulez pas ou ne démontez pas les batteries.
- Ne jetez pas les batteries dans le feu.
- N'essayez pas de recharger des batteries qui ne sont pas conçues pour être rechargées.
- Tenez les batteries à l'écart d'objets métalliques tels que colliers, épingles à cheveux, pièces de monnaie et clés.
- Utilisez uniquement le type de batterie spécifié.
- Utilisez des batteries neuves, toutes du même type, du même modèle et fabriquées par le même fabricant.
- Assurez-vous toujours que toutes les batteries sont insérées conformément aux marquages de polarité +/-.
- Lorsque les batteries sont épuisées, ou si la pédale ne doit pas être utilisé pendant une longue période, retirez les batteries de la pédale.

• Tenez les batteries à l'écart des petits enfants, qui pourraient accidentellement les avaler.

• Si les batteries fuient, évitez le contact avec le liquide qui s'échappe. Si le liquide de la batterie entre en contact avec vos yeux, votre bouche ou votre peau, rincez immédiatement à l'eau et consultez un médecin. Le liquide de batterie est corrosif et peut éventuellement causer des brûlures chimiques ou une perte de la vue.

A PRODUCT OF
FENDER MUSICAL INSTRUMENTS CORPORATION
311 CESSNA CIRCLE
CORONA, CALIF. 92878 U.S.A.

Fender® is a registered trademark of FMIC.

Copyright © 2025 FMIC. All rights reserved.

PN 7733527000 REV. A ENGLISH

ADDITIONAL LANGUAGES

Manual available in additional languages at
www.fender.com/support

SPECIFICATIONS

IMPEDANCES	Input: 500kΩ Output: 470Ω
POWER SUPPLY	80mA min @ 9VDC regulated adapter +⊙- 5.5 x 2.1 mm barrel connector (not included) or 9V alkaline battery (not included)
POWER REQUIREMENTS	9VDC
DIMENSIONS	2.44″ x 4.4″ x 2.2″ (62mm x 111.8mm x 55.9mm)
WEIGHT	0.55 lbs (0.25kg)

Product specifications subject to change without notice

© FENDER MUSICAL INSTRUMENTS 2025

TOHO

GODZILLA

TM & © TOHO CO., LTD.

GODZILLA

产品中有害物质的名称及含量

部件名称	有害物质					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr(VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
箱体	O	O	O	O	O	O
喇叭单元*	O	O	O	O	O	O
电子部分	X	O	X	O	O	O
接线端子	X	O	O	O	O	O
电线	X	O	O	O	O	O
附件	O	O	O	O	O	O

本表格依据 SJ/T 11364 的规定编制。

O：表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X：表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

注：含有有害物质的部件由于全球技术发展水平限制而无法实现有害物质的替代。

*产品含有喇叭单元时有效。