
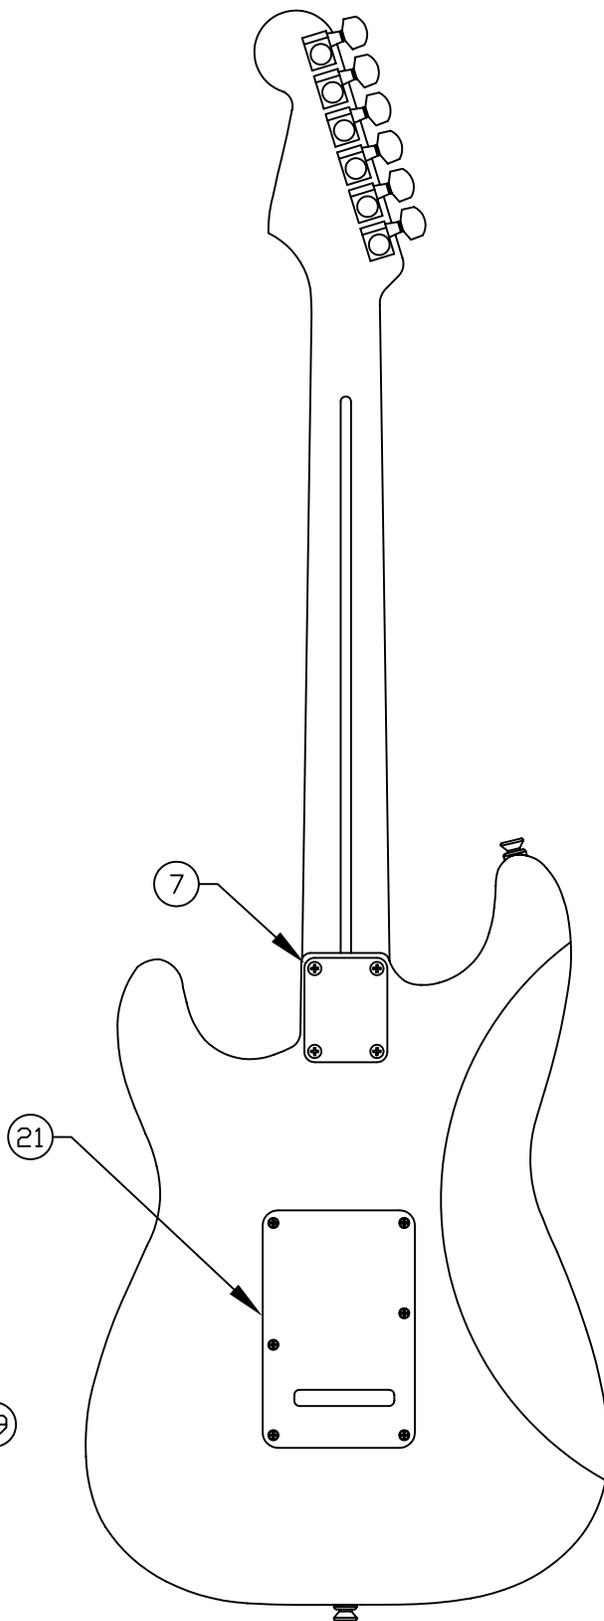


STANDARD FAT STRATOCASTER® , 013-4700/4702

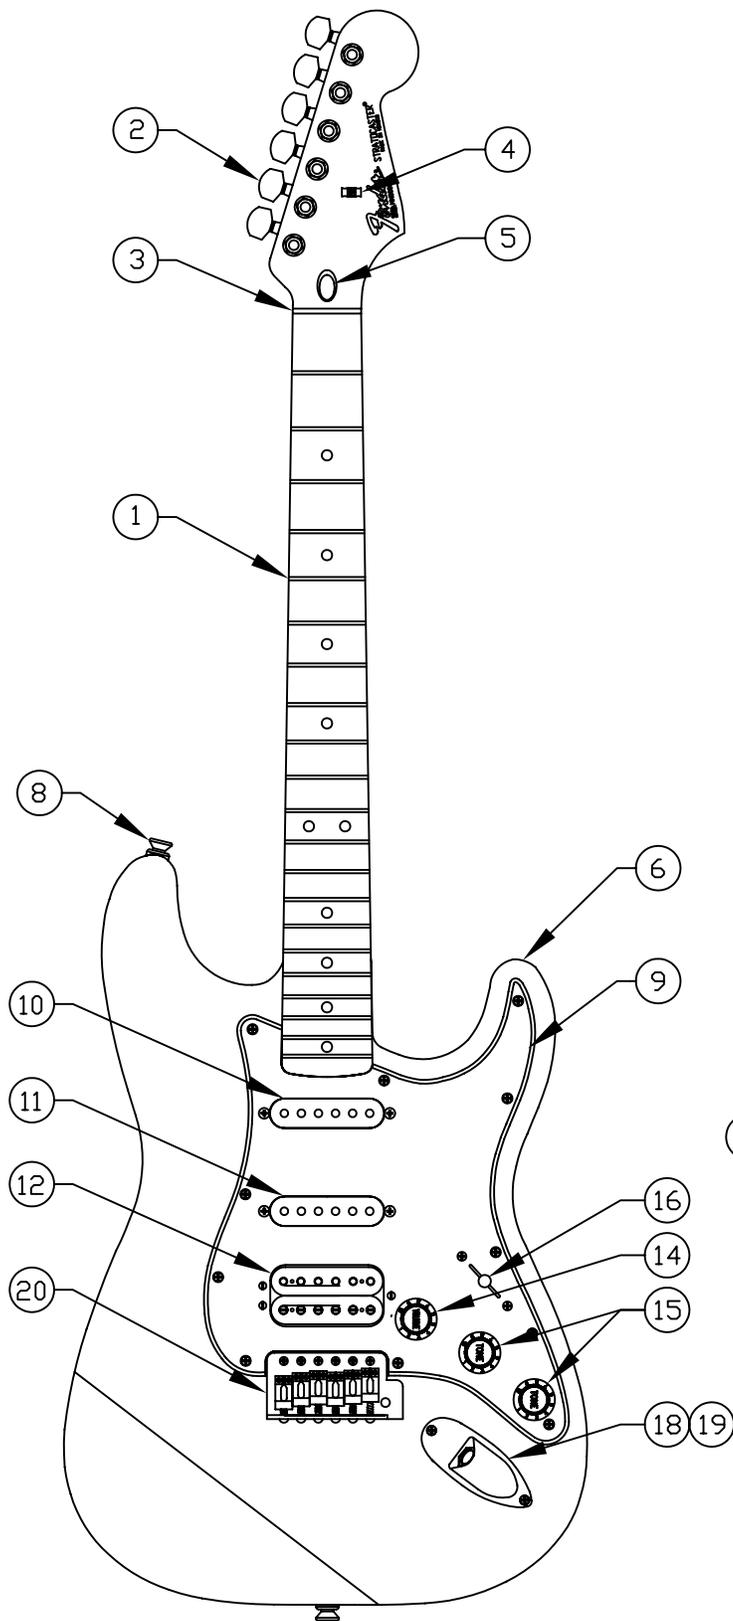

Fender®

STANDARD STRATOCASTER® , 013-4600/4602

REF.#	P/N	DESCRIPTION
1	0029549000	Neck, Squier Strat, RW
	0029548000	Neck, Squier Strat, MN
2	0037429000	Tuning Key, 1 Set ←
	0053107000	Bushing
	0053106000	Washer
3	0083675000	Bone Nut
4	0010389000	String Retainer
	0011357000	Mounting Screw
5	0038454000	Nut, Truss Rod Adjusting
	0038467000	Truss Rod Adjusting Wrench
6	0029547xxx	Body, Squier Strat, Solid Colors
	0040862xxx	Body, Squier Strat, Sunburst
7	0033024000	Neck Mounting Plate, Vint. Tele/Strat
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0020491000	Washer, Felt - White
	0015610000	Mounting Screw
9	0026076002	Pickguard Mex Strat White/ Black/White
	0015578000	Mounting Screw
10	0053206000	Pickup Assy, Strat, Mex, (Neck/Bridge)
	0048631000	Mounting Screw
	0036481000	Tubing
11	0053207000	Pickup Assy, Strat, Mex, (Middle)
	0048631000	Mounting Screw
	0036481000	tubing
12	0013446000	Control, 250K (3)
	0016352000	Mounting Nut
	0022384000	Lock Washer, Intl.
13	0056149000	Knob, Volume Strat, White
14	0056148000	Knob, Tone Strat, White (2)
15	0053291000	Switch, 5 Way Grigsby W/Metal Roller
	0019554000	Knob, White
	0021417000	Mounting Screw
16	0024832000	Capacitor, MPF RDL .022 250V
17	0047329000	Output Jack
	0016352000	Mounting Nut
	0016436000	Lock Washer, Intl.
18	0033023000	Jack Ferrule
	0015578000	Mounting Screw
19	0071014000	Bridge Std. Strat Tremolo
	0021421000	Mounting Screw
	0050918000	Claw, Tremolo
	0015636000	Mounting Screw
	0050922000	Spring, Tremolo
	0054620000	Arm, Tremolo Vint
	0050920000	Knob, Tremolo Arm, White
	0050919000	Adjusting Wrench, Saddle Height
20	0040824002	Back Plate, White Vint Strat
	0015578000	Mounting Screw
21	0012869000	Solder Lug
	0015116000	Mounting Screw


Not a set, part is for individual tuning key

Body Part Number	
0040862532	Brown Sunburst
0029547506	Black
0029547525	Chrome Red
0029547575	Midnight Wine
0029547580	Arctic White
0029547587	Cobalt Blue Metallic



CONTROL FUNCTIONS

5 WAY SWITCH POSITION					
					← 5 WAY SWITCH POSITION
T1	T1 & T2	T2	T2	T2	← TONE CONTROL
					← NECK PICKUP (A)
					← MIDDLE PICKUP (B)
					← BRIDGE PICKUP (C)
	PICKUP IS ON				INDICATES POSITION OF 5 WAY SWITCH
	PICKUP IS OFF				
A	PICKUP (NECK)				
B	PICKUP (MIDDLE)				
C	PICKUP (BRIDGE)				
NT	NO TONE				

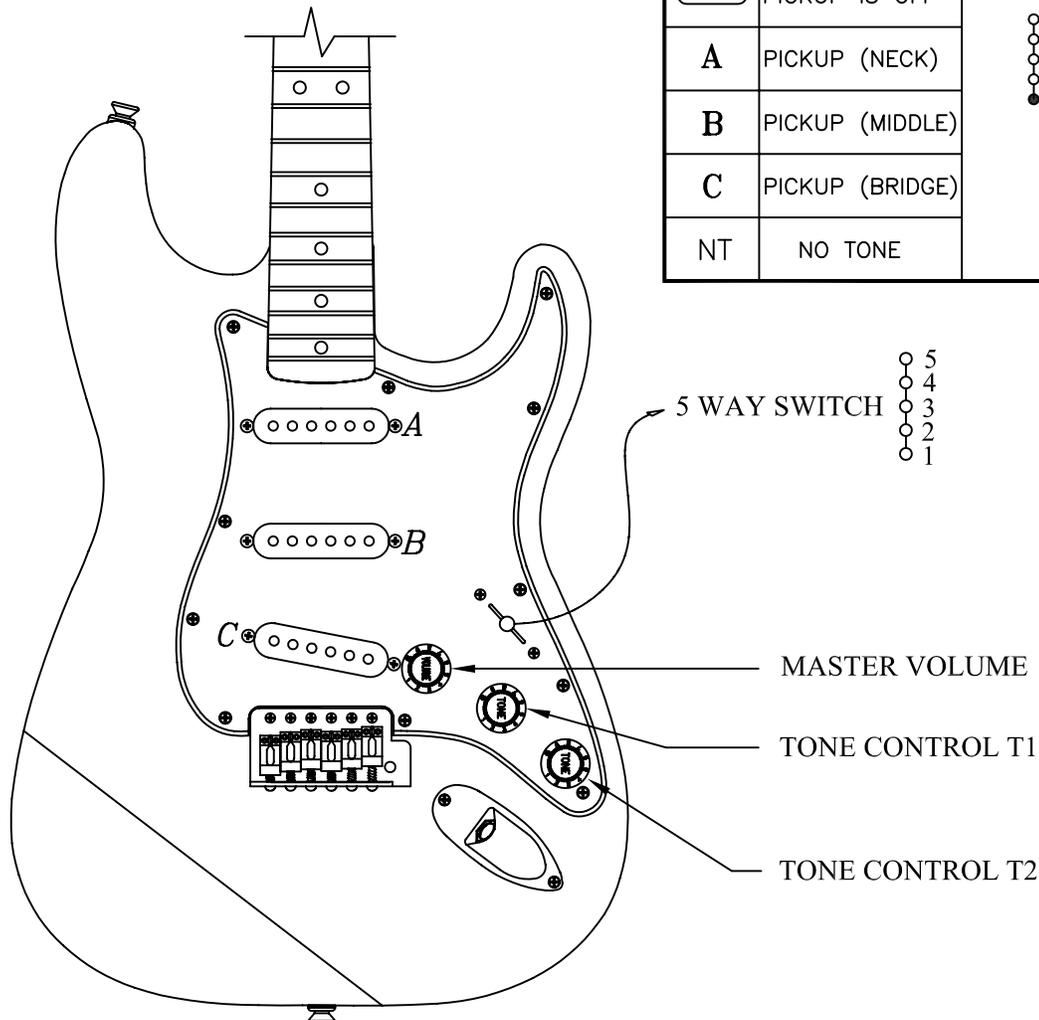

WIRING ASSEMBLY

