
ROGER WATERS P-BASS 0147000306

PARTS LAYOUT

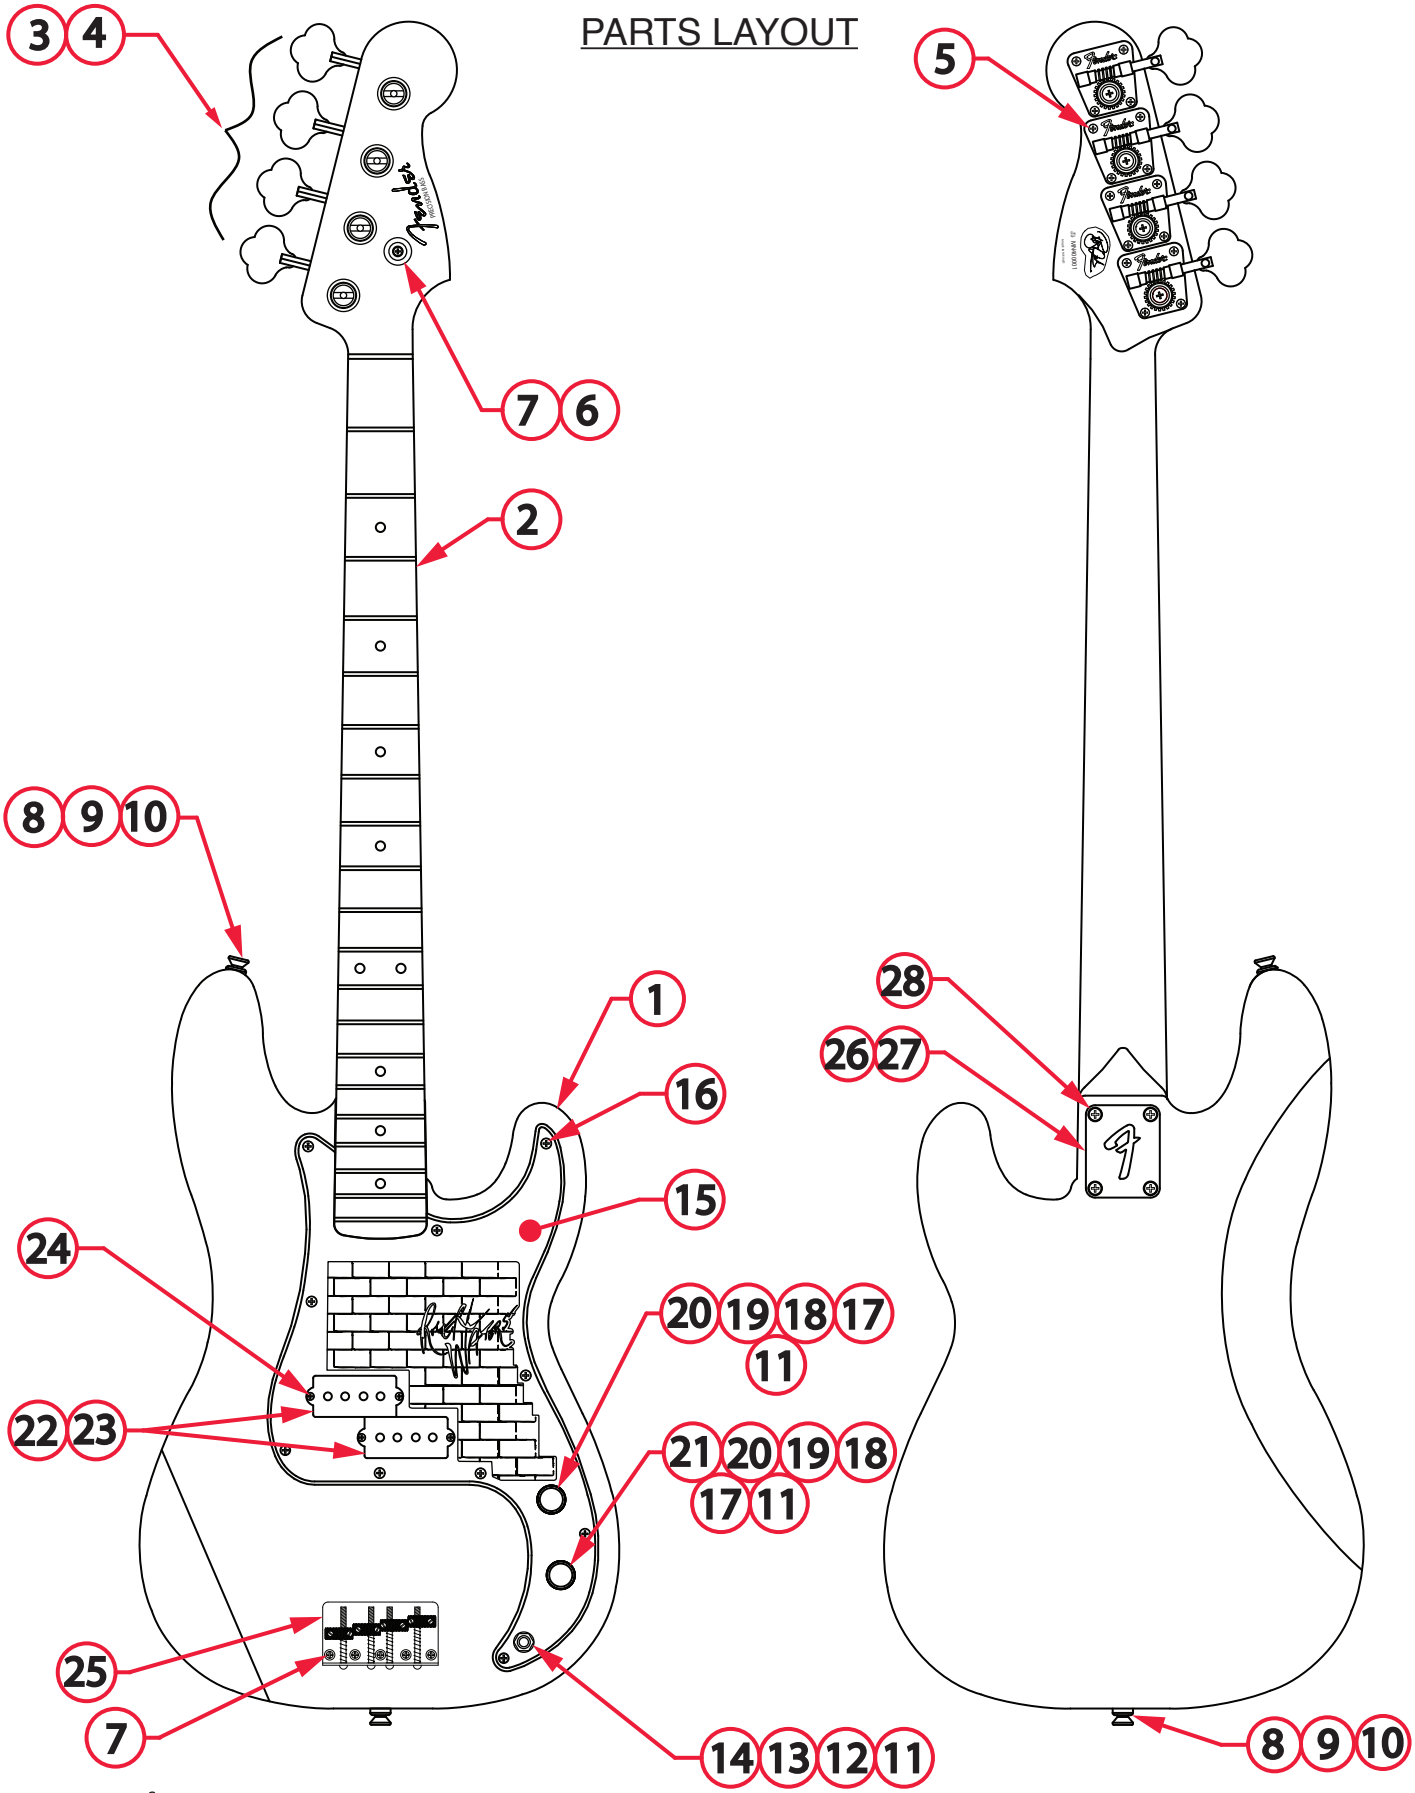

COPYRIGHT - 2011 - FENDER MUSICAL INSTRUMENTS CORPORATION

ROGER WATERS P-BASS 0147000306

PARTS LIST


REF#	DESCRIPTION	PART NUMBER
1	BODY ROGER WATERS P-BASS BLACK PAINT	0077840506
2	NECK ROGER WATERS P-BASS	0077841000
3	KEY ASSY BASS SPECIAL W/O BUSHING	0013187000
4	BUSHING BASS KEY CHROME	0058265049
5	SCREW SMAB 3 X 3/8 RHP NI	0011357049
6	STRING GUIDE DISC BASS	0994913000
7	SCREW SMAB 4 X 1/2 OHP NI	0015578049
8	SCREW SMAB 5 X 1 OHP BLK	0036822049
9	BUTTON STRAP POLISHED BLACK KNIGHT	0068293000
10*	BLACK FELT WASHERS	0994929000
11*	NUT HEX 3/8-32 X 3/32 TK NI	0016352049
12*	WASHER FLAT 3/8 X .614 BLK	0031153049
13*	WASHER LOCKING INTL 3/8 X .687 X .065 NI	0016436049
14	JACK PHONE 1/4 OUTPUT	0047329049
15	PICKGUARD ROGER WATERS P-BASS BVL	0077839002
16	SCREW SMA 4 X 1/2 OHP BLK OXI	0018113049
17	KNOB KNURLED DIAMOND BLACK	0058457000
18*	SCREW SET 8-32 X 3/16 SL	0994922000
19*	WASHER LOCKING INTL 3/8 X .500 X .020 NI	0022384049
20*	CONTROL 250K 10% AUDIO METAL	0990831000
21*	CAPACITOR CD .05UF 100V 20%	0015552049
22	PICKUP DUNC SPB-3 Q-POUND BLACK NO LOGO	9280730080
23*	WEATHER STRIPPING 3/8 X 3/8 OPN CL RUBER	0017333049
24	SCREW WOOD 4 X 1-1/4 RHP BLACK	0036810049
25	BRIDGE ASSY VINTAGE MEX P-BASS BLACK	0074200000
25A	BRIDGE PLATE P-BASS BLACK KNIGHT	0074304000
25B	SCREW M 6-32 X 1-1/2 RHP BLACK	0017571049
25C	SPRING TELE BRIDGE BLACK	0018872049
25D	SECTION BASS BRIDGE PLSH BLACK KNIGHT	0074302000
25E	SCREW ST 6-32 X 7/16 BLACK HEX/SC OV	0021093049
26	PLATE NECK F LOGO CS CHROME	0991448100
27*	SHIM NECK PLATE #NPG-1	9280610005
28	SCREW SMA 8 X 1-3/4 OHP NI	0015636049
*	WRENCH HEX KEY 1/16 SHORT ARM	0021109049
*	MANUAL OWNERS GUITAR & BASS	0037723000
*	DELUXE GIG BAG BASS GUITAR	0991522000

* = NOT PICTURED IN DIAGRAM

COPYRIGHT - 2011 - FENDER MUSICAL INSTRUMENTS CORPORATION

ROGER WATERS P-BASS 0147000306


WIRING ASSEMBLY

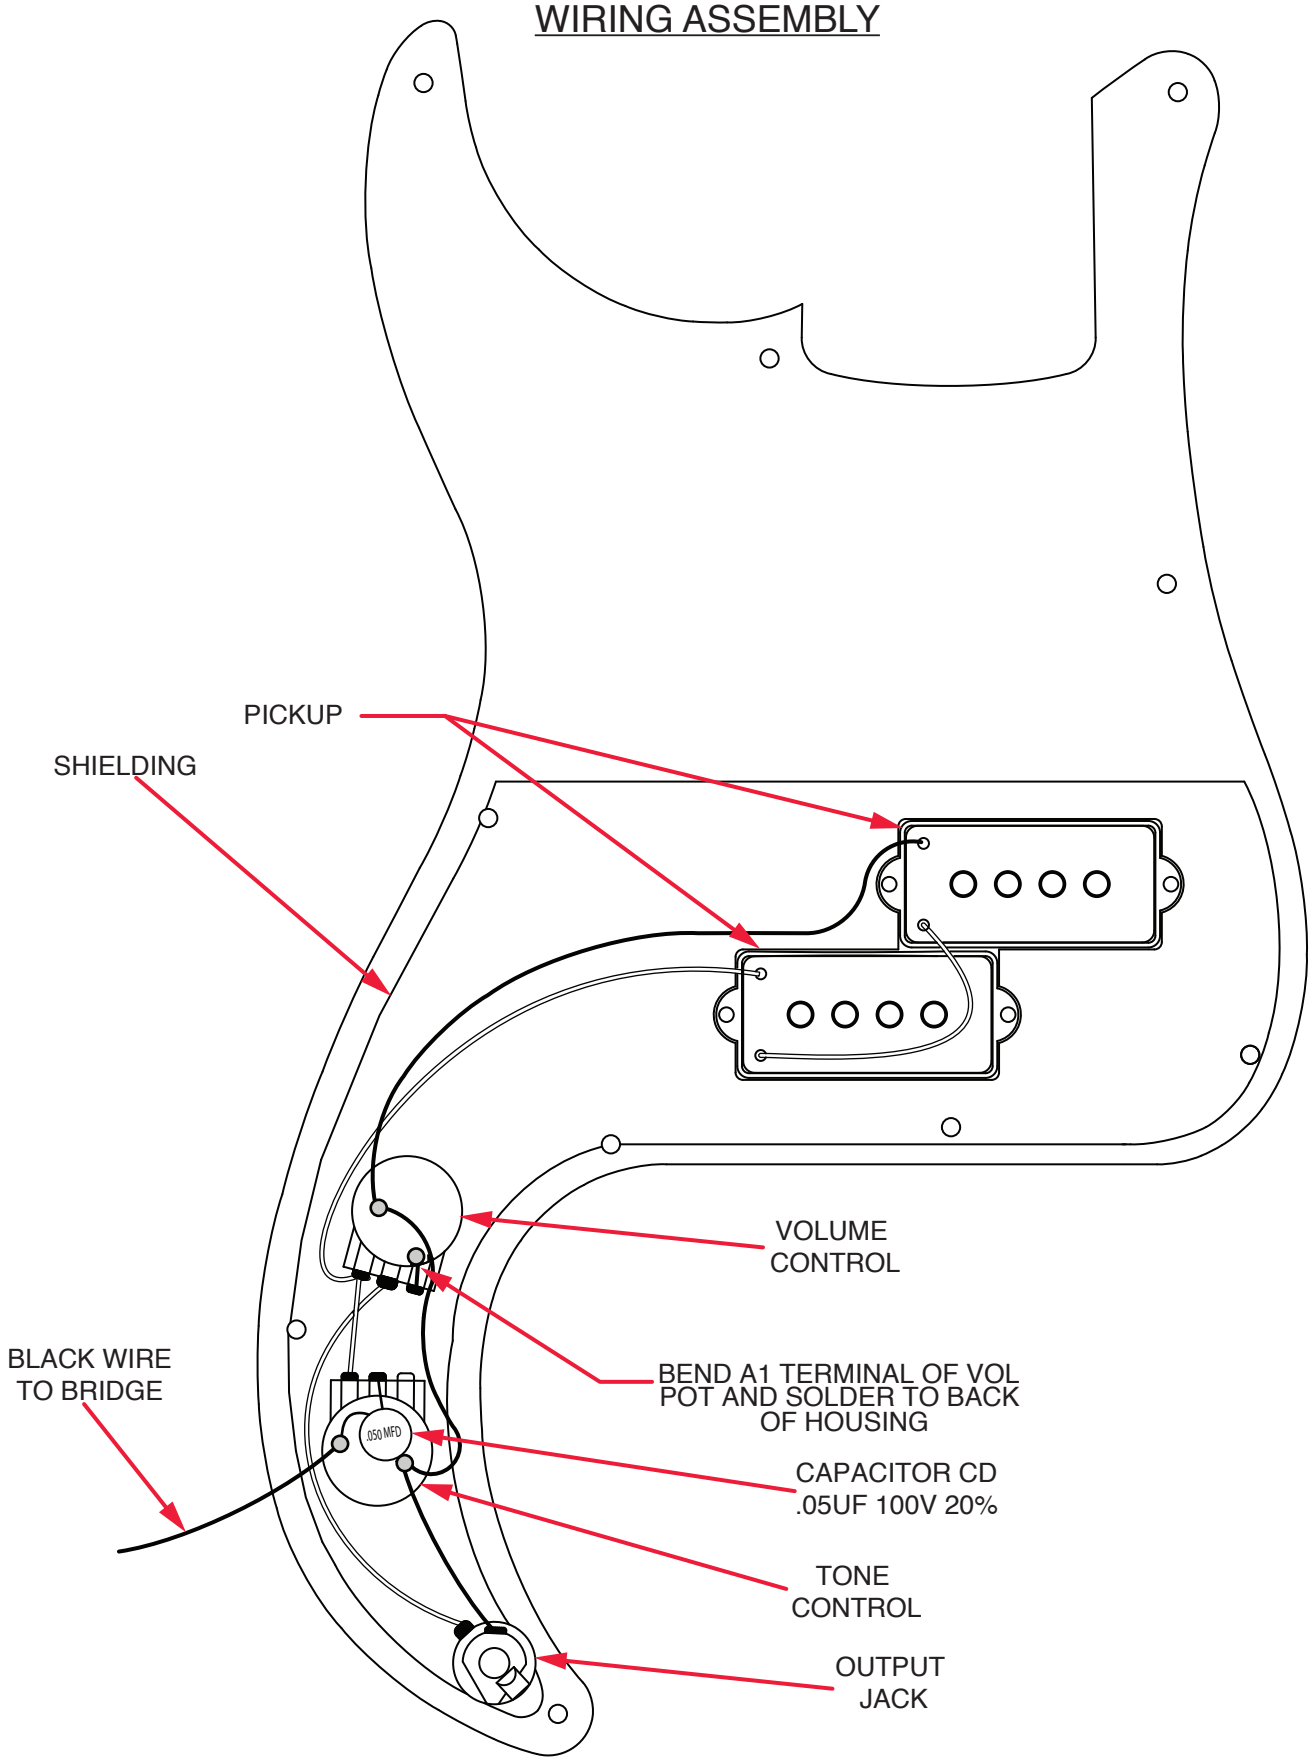

COPYRIGHT - 2011 - FENDER MUSICAL INSTRUMENTS CORPORATION

ROGER WATERS P-BASS 0147000306

SWITCH AND CONTROL FUNCTION

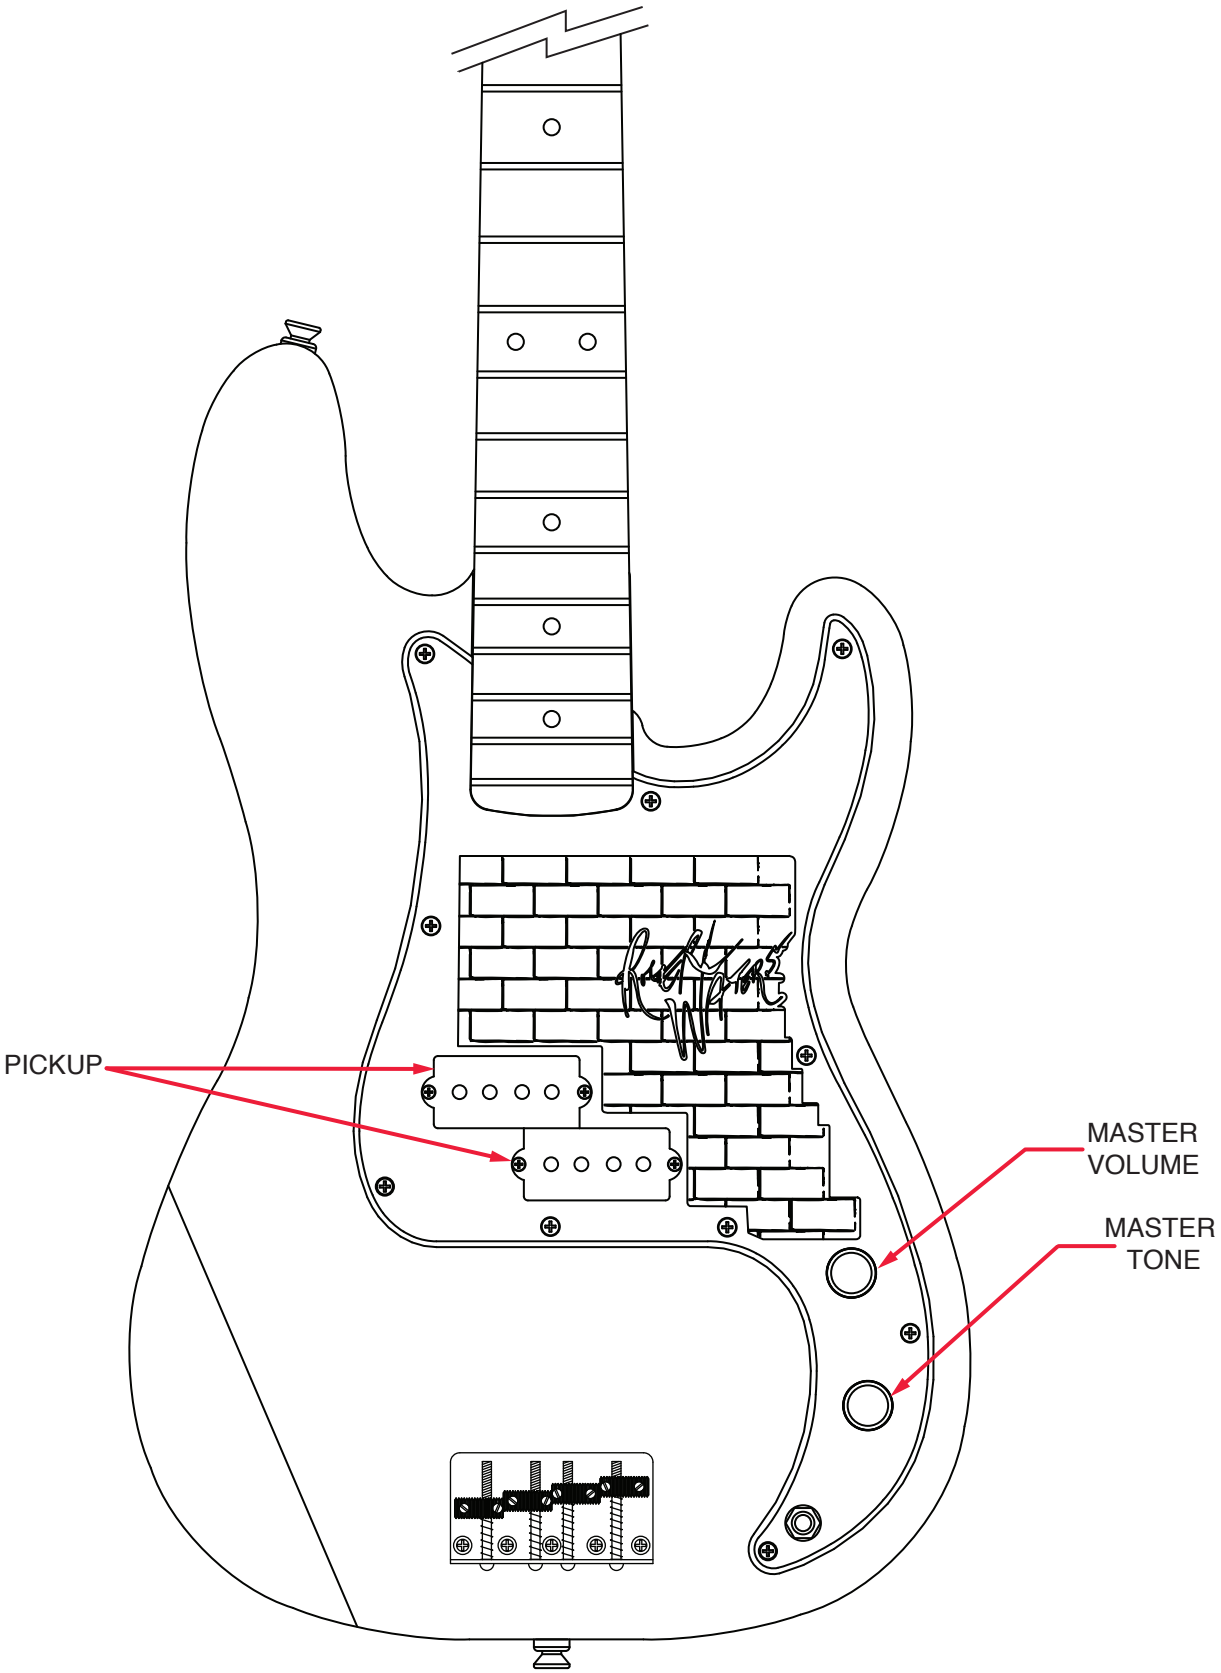

COPYRIGHT - 2011 - FENDER MUSICAL INSTRUMENTS CORPORATION