



'60s TELECASTER<sup>®</sup>, 013-1600

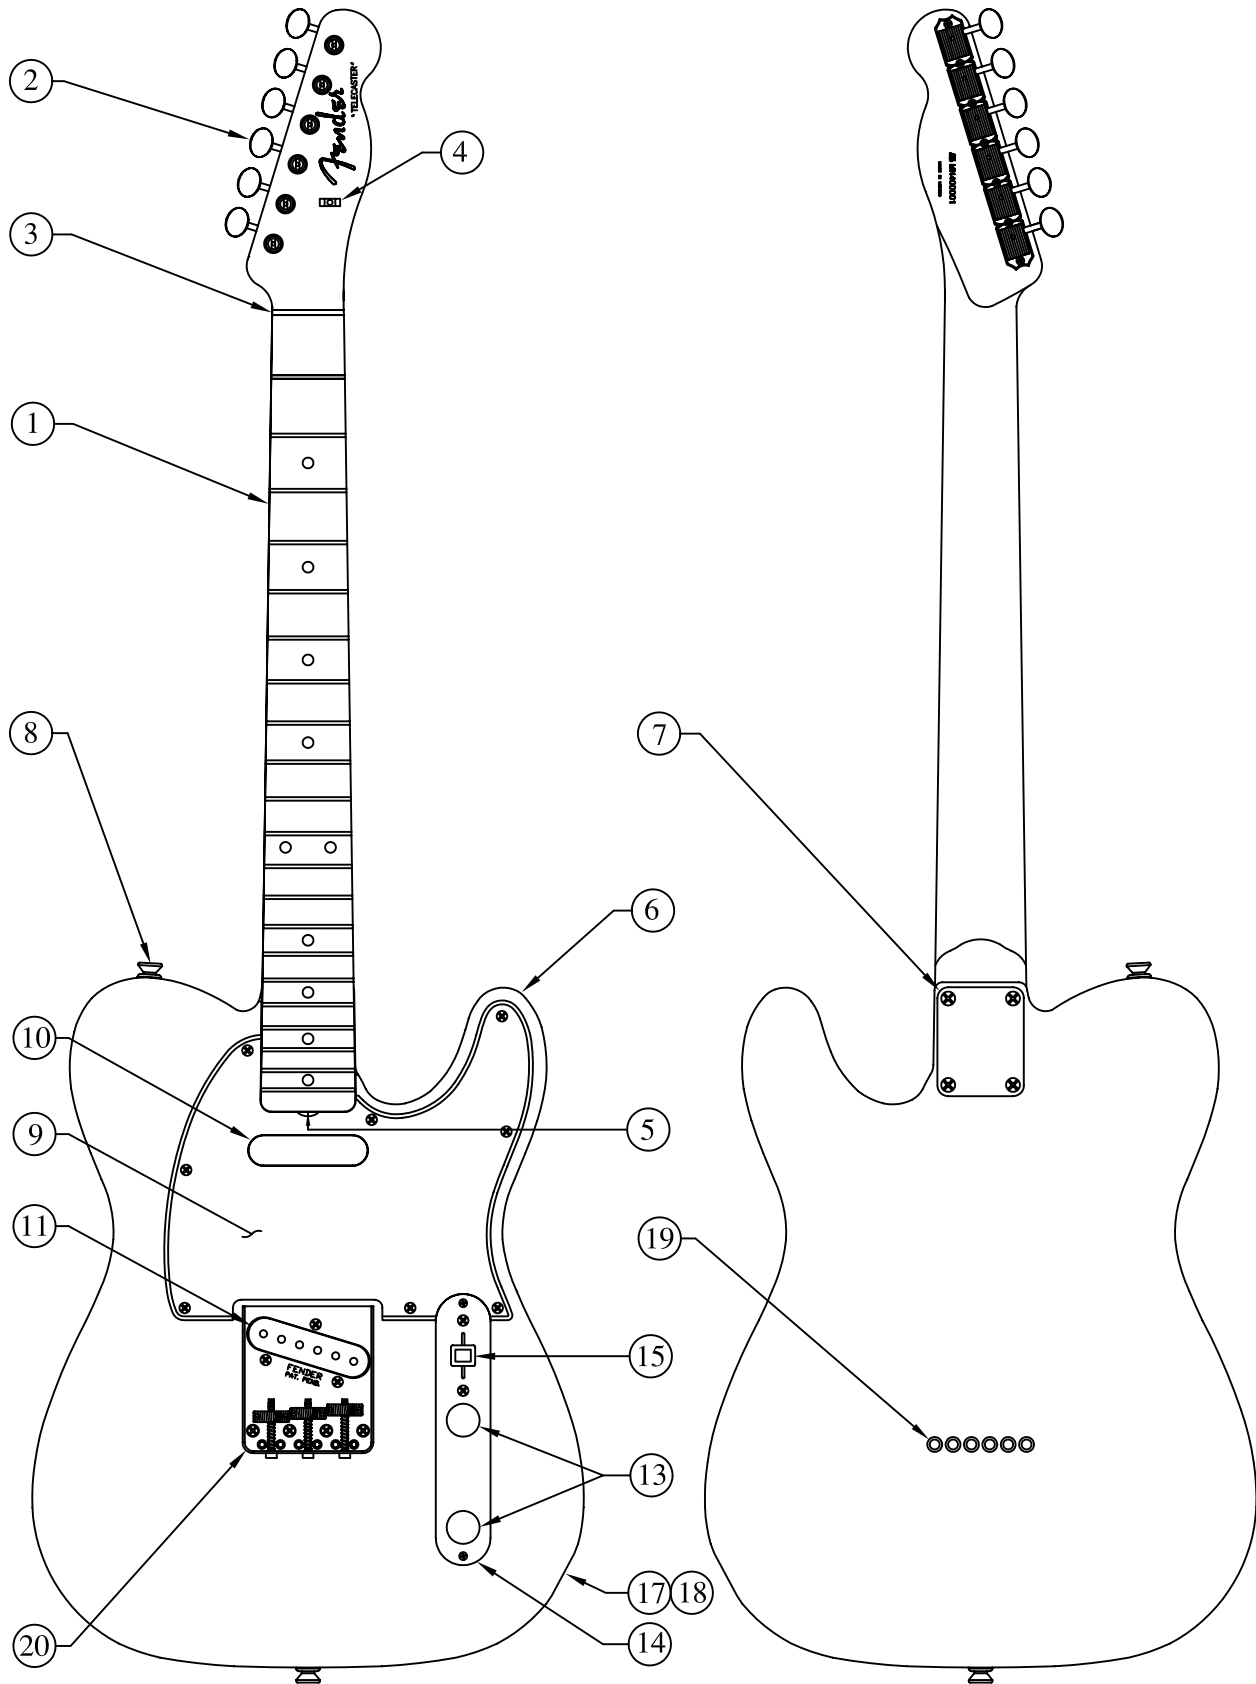


*Fender*<sup>®</sup>

# '60s TELECASTER<sup>®</sup>, 013-1600

## WIRING DIAGRAM

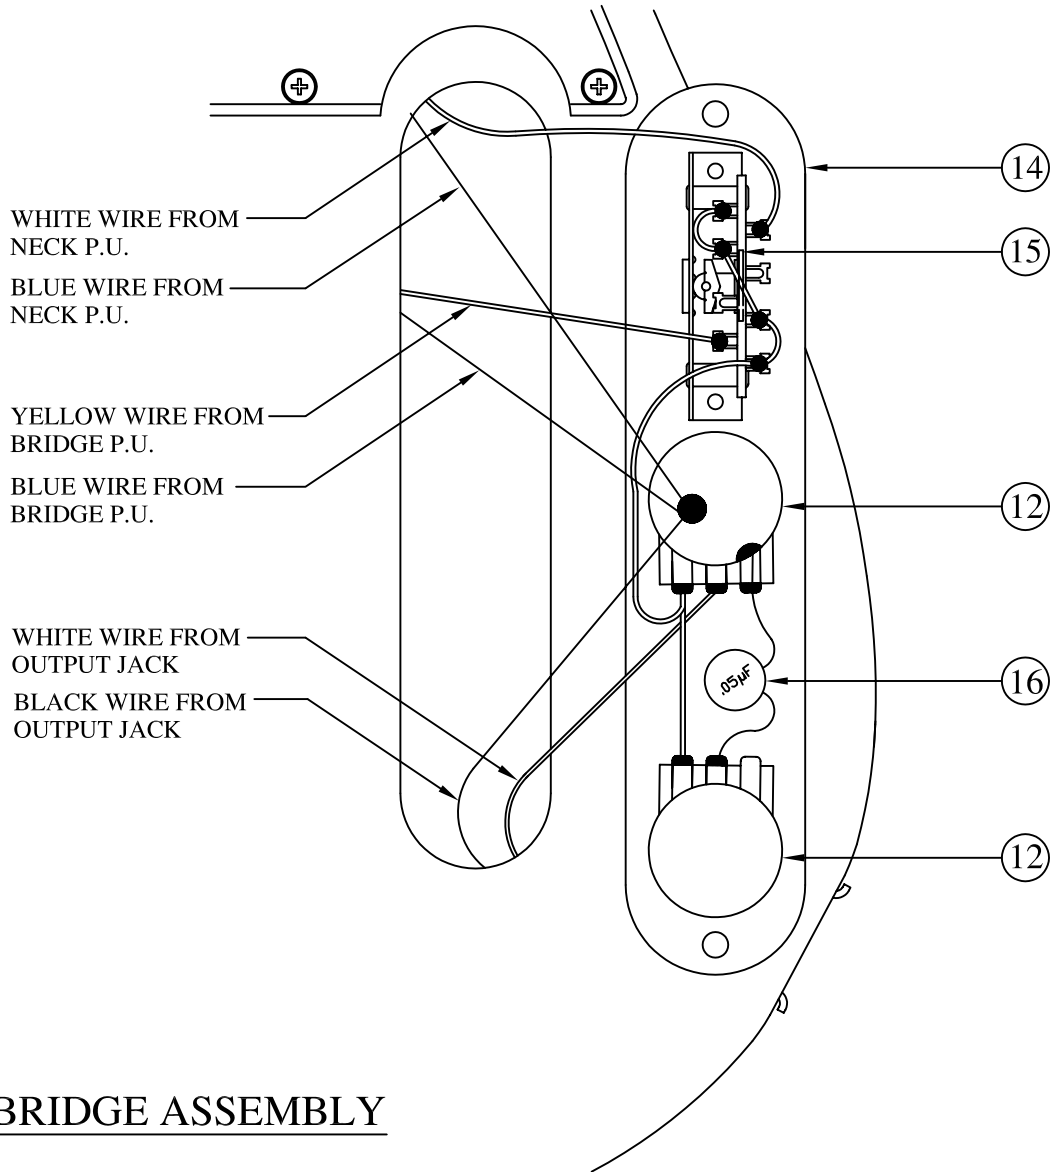

## BRIDGE ASSEMBLY

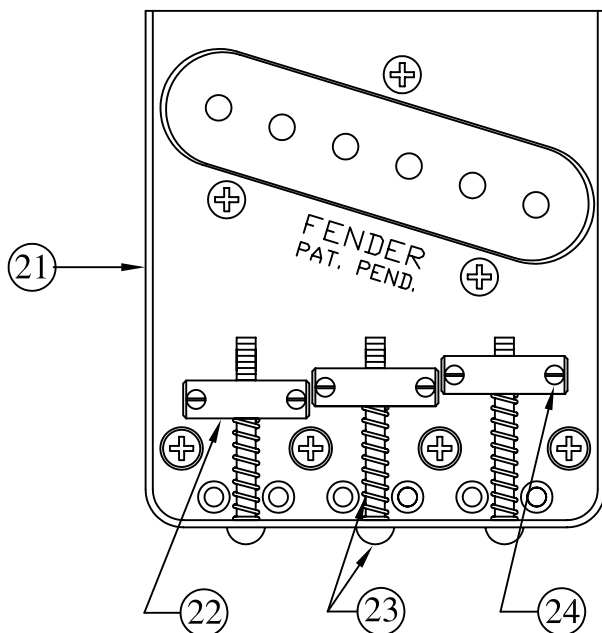

*Fender*<sup>®</sup>

# '60s TELECASTER<sup>®</sup>, 013-1600

REF.#	P/N	DESCRIPTION
1	0058381000	Neck, 60's Tele R/W
2	0047912000	Tuning Key, (1) Set
	0053020000	Bushing, Key
	0011357000	Mounting Screw
3	0083675000	String Nut, Melamine Formaldehyde
4	0010389000	String Retainer
	0020423000	Spacer
	0011358000	Mounting Screw
5	0012252000	Truss Rod Adjustment Nut
6	See Chart	Body, 60's Telecaster, Adler
7	0018353000	Neck Mounting Plate
	0015636000	Mounting Screw
8	0012344000	Strap Button
	0015610000	Mounting Screw
9	0056077002	Pickguard, 62 Custom Tele, MG/B/MG
	0015578000	Mounting Screw
10	0053678000	Pickup Assy, Mex Vint Tele, Neck
	0016295000	Mounting Screw
	0039410000	Tubing, Latex Cut
11	0053676000	Pickup Assy, Mex Vint Tele, Bridge
	0015800000	Mounting Screw
	0063398000	Tubing, Latex Cut
12	0019064000	Control, 250k (2)
	0016352000	Mounting Hex Nut
	0016436000	Washer, Lock Intl.
13	0013359000	Knob, Knurled Chrome (2)
	0028897001	Screw Set (2)
14	0033134060	Plate, Control
	0015578000	Mounting Screw
15	0053290000	Switch, Lever 3-Position
	0019448000	Knob, Black
	0021417000	Mounting Screw
16	0015552000	Capacitor, .05 $\mu$ F
17	0047329000	Output Jack
	0016352000	Mounting Hex Nut
	0016436000	Washer, Lock Intl.
18	0021452000	Ferrule, Jack
19	0012112000	String Retainer, Ferrule
20	0058384000	Bridge Assy, Mex 60's Tele
	0016188000	Mounting Screw
21	0054162000	Bridge Plate, Tele Vintage
22	0056038000	Bridge Section. (3)
23	0015834000	Intonation Screw, NI, (3)
	0018689000	Intonation Spring, 1-3
24	0016105000	Height Adjust Screw, NI, (6)


### BODY CHART

P/N	COLOR
0058380505	Olympic White
0058380506	Black
0058380509	Candy Apply Red



# '60s TELECASTER<sup>®</sup>, 013-1600

3 WAY SWITCH POSITION			
3 ○ ○ ○	2 ○ ○ ○	1 ○ ○ ○	
█	█	○	← NECK PICKUP (A)
○	█	█	← BRIDGE PICKUP (B)
█	PICKUP IS ON		INDICATES POSITION OF 3 WAY SWITCH
○	PICKUP IS OFF		
A	PICKUP (NECK)		○ ○ ● 1
B	PICKUP (BRIDGE)		

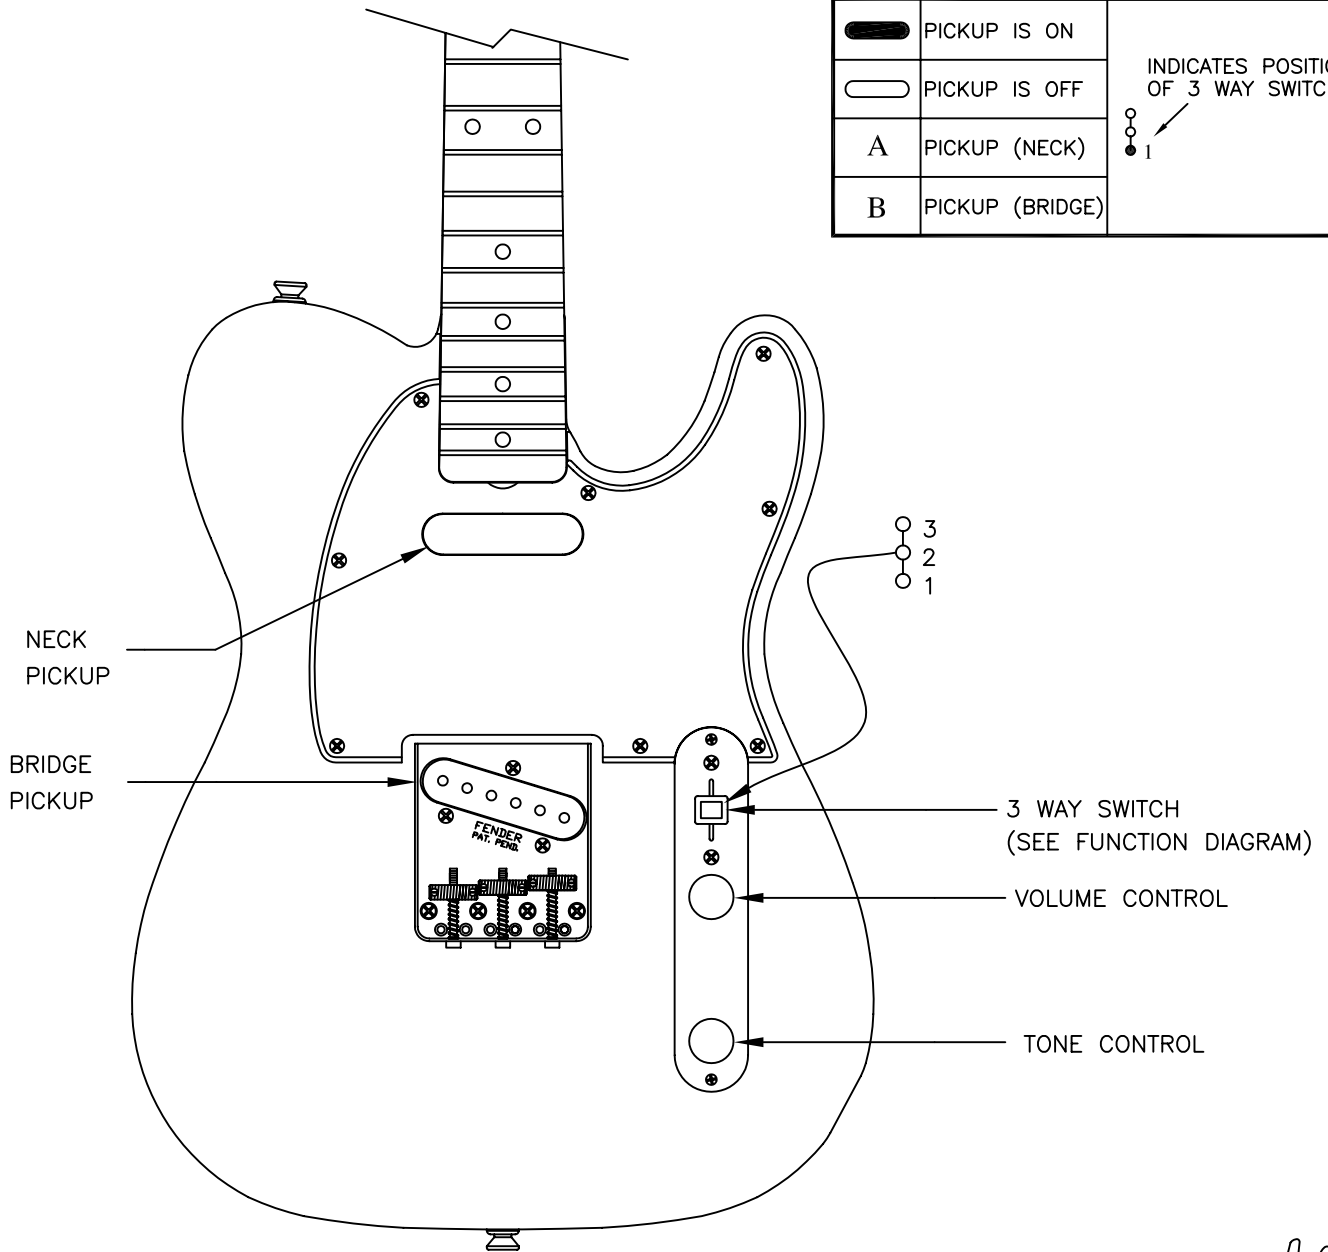

*Fender*<sup>®</sup>