


CLASSIC PLAYER JAZZMASTER, 014-1600-300/06

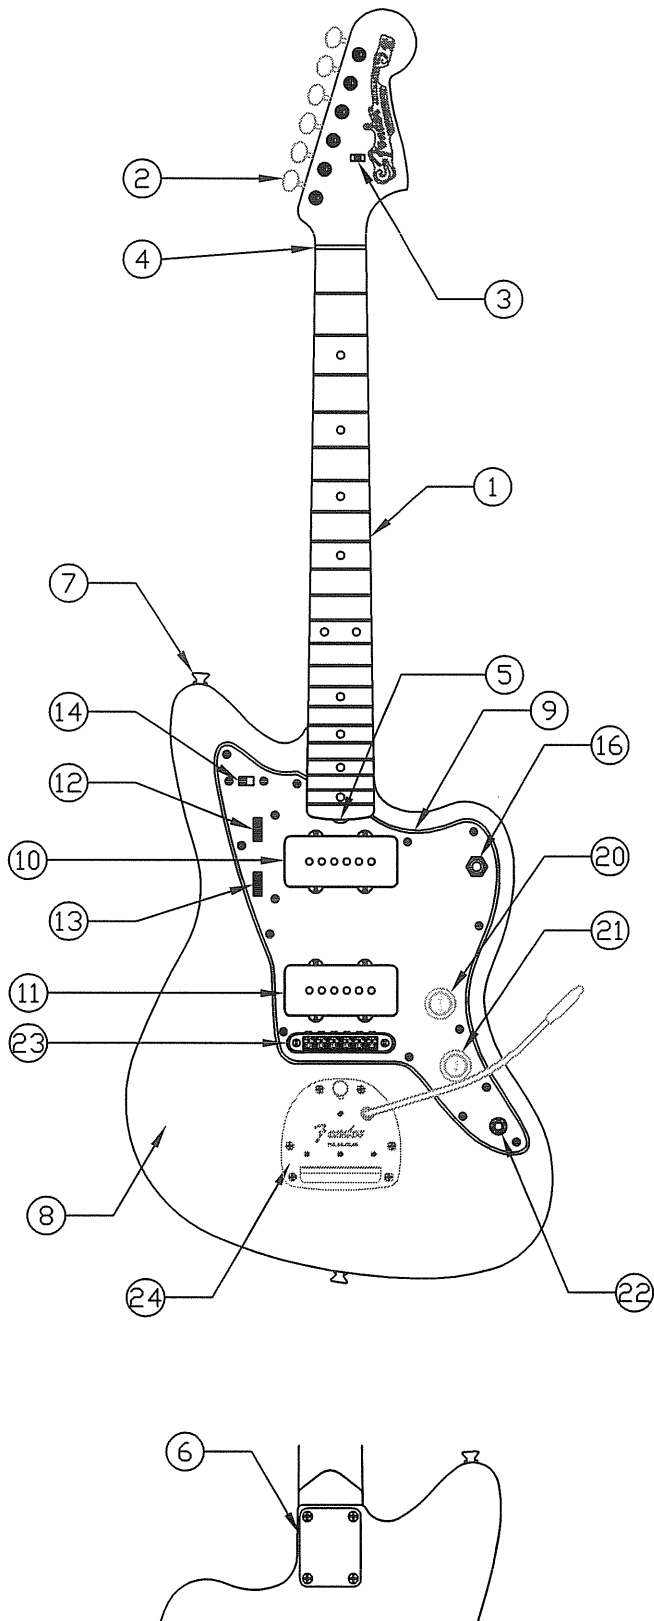


REF#	DESCRIPTION	PACKAGE #
1	NECK JAZZMASTER SPCL MX PNT	007-6227-980
1a	STANDARD GUITAR FRET WIRE (24 PACK)	099-1998-000
2	KEY, VINT ST PING	004-7912-000
2a	BUSHING KEY VINT PING	005-3020-000
2b	VINTAGE BASS KEY MOUNTING SCREWS (12)	001-1357-049
3	ORIGINAL STRAT STRING GUIDES (2 PACK)	099-4910-000
3a	SPACER STR TREE 62 STRAT	002-0423-000
3b	STRING GUIDE MOUNTING SCRES	001-1358-049
4	BONE NUT BLANKS (2 PACK)	099-4920-000
5	ORIGINAL TRUSS ROD NUT	099-4944-000
6	PLATE NECK VINTAGE TELE	099-1447-100
6a	PLATE NECK MOUNG SCREWS	001-5636-049
7	ORIG STRAT BUTTONS	099-4915-000
7a	SCRW WOOD 6x1 OHP NI	001-6188-049
8	BODY JAZZMASTER SPCL BLK PNT	007-6228-706
	BODY JAZZMASTER SPCL 3TS PNT	007-6587-700
9	PICKGUARD JAZZMASTER SPCL BRW SHL BVL	007-6309-002
9a	PICKGUARD MOUNTING SCREWS	001-5578-049
10	PICKUP ASSY JAZZMASTER SPECIAL NK	007-6313-000
11	PICKUP ASSY JAZZMASTER SPECIAL BRDG	007-6314-000
10a & 11a	SCRW WD RND HD 3 X 1 NI	001-6295-049
10a & 11a	WEATHRSTRP 3/8x3/8 OPN CL RUBR	001-7333-049
12	CONTROL MINIPOT 1MEG LINEAR W/NUT	005-4457-000
13	CONTROL MINIPOT 50K LINEAR W/NUT	005-4458-000
12a & 13a	KNOB DISC PRESET CNTRL 1"x.25	005-4455-000
12b & 13b	SCRW M 4-40x1/4 OHP NI	001-5719-049
12c & 13c	WASHER LOCK INTERNAL TOOTH 1/4	001-6451-000
12d & 13d	BRACKET CONTROL MTG JAZZMASTER	005-4454-000
14	SWITCH SLIDE SS 50 DP DT	001-7079-000
14a	SWITCH SLIDE MOUNTING SCREWS	001-5719-049
15	CAP CD .02µF 10% 3/4 dia	005-4459-000
16	SWITCH 3 POS TOGGLE AGED KNOB	005-3694-000
17	CONTROL 1 MG LINEAR SPLT SHAFT	005-4453-000
18	CONTROL 1 MG A TAPER SPLT SHFT	005-4032-000
17a & 18a	HEX NUTS (12)	001-6352-049
17b & 18b	WASHER INT LOCK .035"x3/8" NI	005-6790-000
18c	CAP CD .03µF 100V 20%	001-5545-049
19*	LUG SOLDER BRONZE TINNEDW/2 HL	001-2869-000
19a*	GROUNDING LUG SCREWS (12)	001-5116-049
20	KNOB STRAT VOL AGED WHT PIMCO	099-1369-000
21	KNOB STRAT TONE AGED WHT PIMCO	099-1369-000
22	OUTPUT JACK	002-1956-000
22a	NUT HEX 3/8-32x3/32 TK NI	001-6352-049
22b	LOCKING WASHERS (12)	001-6436-049
22c	WSHR FLAT 3/8x.614 NI	003-1153-049
23	BRIDGE ASSY T-O-M w/POSTS, INSERTS CHROM	007-6230-000
24	TREM ASSY, JAG/JAZZ CHRMTAESUNG, w/ARM	007-6232-000
24a	TREMOLO ASSY MOUNTING SCREWS	001-5610-049
25*	DELUXE GIG BAG ELECTRIC GUITAR	099-1512-006

* = Not picture in diagram

Bold = Items available for warranty replacement only

CLASSIC PLAYER JAZZMASTER, 014-1600-300/06

WIRING ASSEMBLY

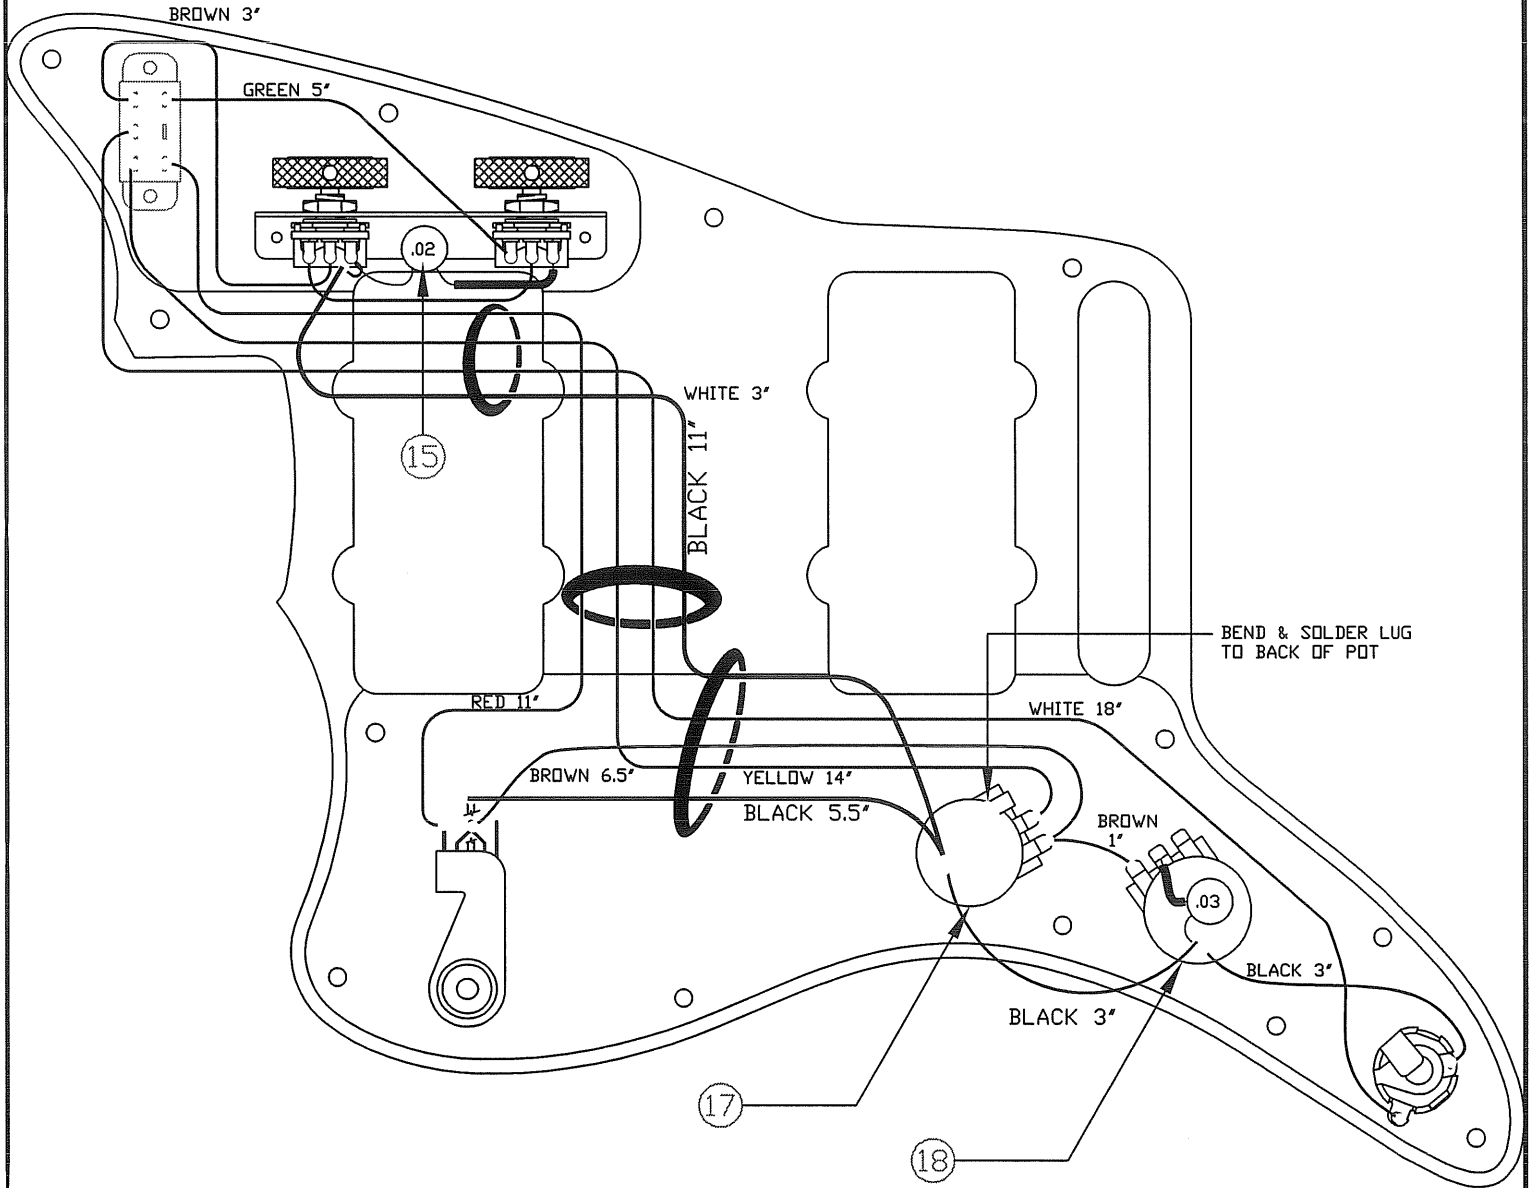

CLASSIC PLAYER JAZZMASTER, 014-1600-300/06

3 WAY SWITCH POSITION			
			← INDICATES POSITION OF 3 WAY SWITCH
			← NECK PICKUP (A)
			← BRIDGE PICKUP (B)
	PICKUP IS ON		
	PICKUP IS OFF		
A	PICKUP (NECK)		
B	PICKUP (MIDDLE)		

NOTE: ONLY RHYTHM PICKUP IS FUNCTIONAL WHEN RHYTHM/LEAD SWITCH IS IN RHYTHM POSITION (LEAD PICKUP IS OFF)

RHYTHM/LEAD SWITCH


RHYTHM

LEAD

RHYTHM VOLUME

RHYTHM TONE

THESE FUNCTION FOR RHYTHM PICKUP ONLY, AND ONLY WHEN SWITCH IS IN RHYTHM POSITION

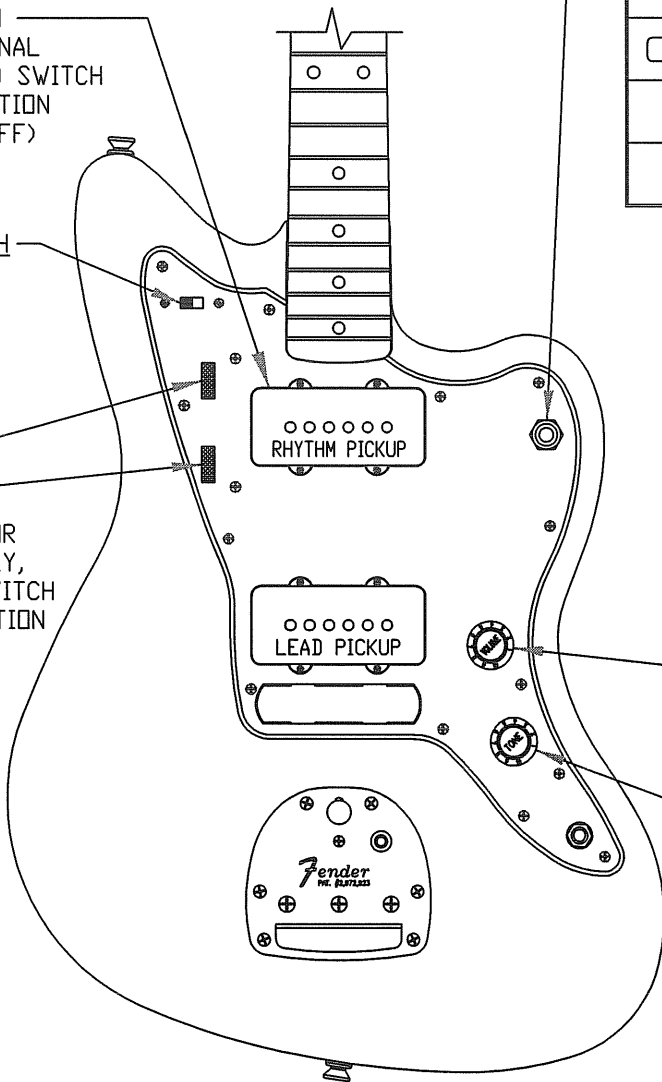

MASTER VOLUME

WHEN RHYTHM/LEAD SWITCH IS IN LEAD POSITION (NON-FUNCTIONAL IN RHYTHM POSITION)

MASTER TONE

WHEN RHYTHM/LEAD SWITCH IS IN LEAD POSITION (NON-FUNCTIONAL IN RHYTHM POSITION)

